

Elco Burner Settings

Code	Burner	Fuel	Nozzle	Pump pressure	Air starting point (approx)	Pump set for	Head	Blast tube
*3146022	FB 2 18 K LN	Kerosene	0.40 80 SF	9.3 bar	4.0	Single pipe	A	65328407
3146023	FB 2 20 K LN	Kerosene	0.50 80 ES	9.8 bar	5.4	Single pipe	A	65328407
3146024	FB 2 26 K LN	Kerosene	0.65 80 ES	9.3 bar	3.5	Single pipe	A	65328407
3146025	FB 2 35 K LN	Kerosene	0.85 60 ES	8.6 bar	3.9	Single pipe	A	65328408
3146162	FB 2 44 K LN	Kerosene	1.10 60 ES	10.3 bar	6.5	Single pipe	A	65328409
3146163	FB 2 58 K LN	Kerosene	1.50 60 S	7.8 bar	3.5	Single pipe	A	65328410
3146164	FB 3 73 K LN	Kerosene	2.00 60 S	7.0 bar	6.5	Single pipe	A + 3	65328414
3146165	FB 3 100 K LN	Kerosene	2.50 60 S	9.5 bar	5.0	Single pipe	A + 3	65328415