




HEAT PUMP GUARD

Assembly Instructions

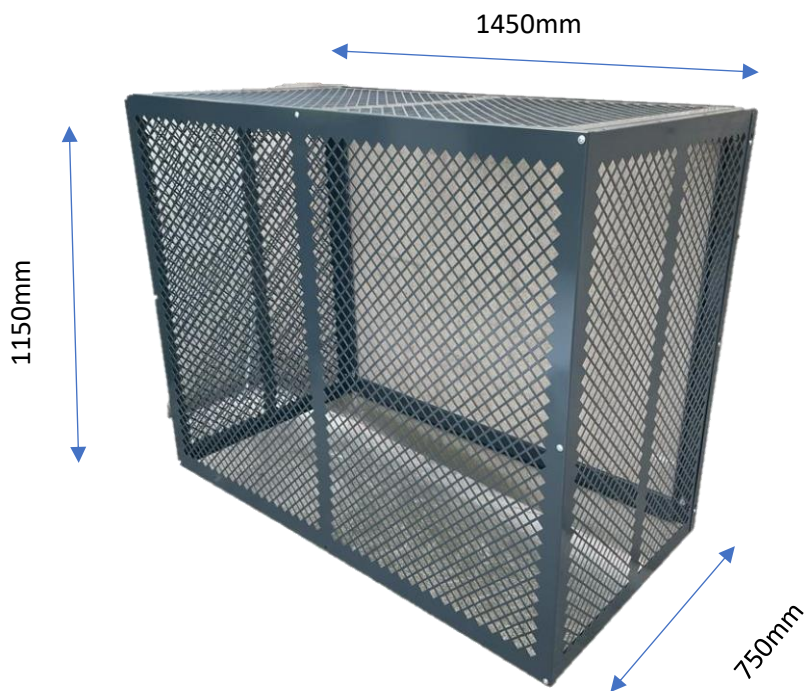

Firebird Sales Code : ASH000GRD

This instruction manual shows the correct handling of the product and important precautions necessary to prevent accidents.

Be sure to read this manual thoroughly and use the product correctly.

Keep this manual available for future reference.



Environment



Innovation



Technology

GUIDE TO ASSEMBLY

1. Fit the wall frame to the wall with suitable wall fixings (not supplied).



2. Slot the side panels (left & right) into the wall frame. Tighten screws.



3. Slide the top panel into the guides on the sides.



4. Insert front inspection panel and secure all screws.



5. Tighten front 7 screws evenly and ensure guard is level and assembled correctly.



List of Components

Qty.

Wall Frame	1
Left Panel	1
Right Panel	1
Top Panel	1
Front Panel	1
M6 Button Head Bolts	13
Instruction Manual	1

Weight: 30kgs
All components are recyclable.

**Features:**

- Quick to assemble, easy to install.
- Unit is power coated for durable long-lasting investment.
- Unique sliding panel system.
- All panels can be removed for maintenance.
- Security screws M6 button head.
- Finished RAL 7016 gloss.

Application:

- Protects heat pumps from theft and unwanted access.
- Keeps units secure and safeguarded from physical damage.

Guidance on Installation:

Whilst this product is sufficiently robust for its purpose, it is not designed to be load bearing, and should not be used to support excessively heavy items.

Installation Location:

Allow for suitable clearance around the guard for maintenance.

The wall that the guard will be mounted on should be able to support a weight of at least four times that of the guard.

Determine the strength of the wall the guard will be mounted on. Reinforce the wall sufficiently, if necessary.

If any of the screws are loose or fall out, the guard may fall and cause injury or damage property. Be sure to use the appropriate screws for the material of the wall and install the unit securely using four screws. Fixing screws are not supplied and the correct screws must be selected for the structure.

If the wall is uneven, the wall bracket can be suspended to a maximum of 100mm between the wall and the guard. Suitable fixings should be used. Care should be taken to limit the opening between the guard and wall.

The guard should be located within 100mm from the ground.

Care and Maintenance:

The guard should be inspected annually to check they have not been damaged or subjected to unauthorised modification. Repair or replace the guard as necessary if damaged.

All powder coated products should be cleaned with either a soft cloth or a brush, using a solution of mild soap and warm water. The best type of soap to use for this purpose is one that has emulsifiers that can break down the most common types of stains.

Powder coated panels that have been scratched or cut, should be cleaned and painted immediately to reduce rust formation.

High-Wall Mounted Units:

Additional base panels are available for high-level applications.



Firebird
Údáras Industrial Estate
Baile Mhic Íre
Co. Cork P12 HK51
Ireland
t: +353 (0)26 45253
f: +353 (0)26 45309
e: sales@firebird.ie
www.firebird.ie

Firebird
Shean Forkhill
Newry BT35 9SY
Northern Ireland
t: +44 (0)28 3088 8330
f: +44 (0)28 3088 9096
e: salesni@firebird.ie
www.firebird.ie

Firebird
Phoenix House
Eastern Wood Road
Langage Industrial Estate
Plympton
Plymouth PL7 5ET
United Kingdom
t: +44 (0)1752 691177
f: +44 (0)1752 691131
e: sales@firebird.uk.co
www.firebird.uk.com