


EN INSTRUCTION MANUAL
ES MANUAL DE INSTRUCCIONES
DE BEDIENUNGSANLEITUNG
FR MANUEL D'UTILISATION
IT MANUALE DI ISTRUZIONI

PT MANUAL DE INSTRUÇÕES
DA BRUGSANVISNING
NL INSTALLATIEHANDLEIDING
SV INSTALLATIONSHANDBOK
EL ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ

YUTAKI M
RASM-(2-3)VRE

R32 SERIES

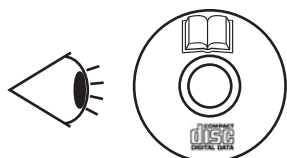

English

Specifications in this manual are subject to change without notice in order that HITACHI may bring the latest innovations to their customers.

Whilst every effort is made to ensure that all specifications are correct, printing errors are beyond HITACHI's control; HITACHI cannot be held responsible for these errors.

Español

Las especificaciones de este manual están sujetas a cambios sin previo aviso a fin de que HITACHI pueda ofrecer las últimas innovaciones a sus clientes.

A pesar de que se hacen todos los esfuerzos posibles para asegurarse de que las especificaciones sean correctas, los errores de impresión están fuera del control de HITACHI, a quien no se hará responsable de ellos.

Deutsch

Bei den technischen Angaben in diesem Handbuch sind Änderungen vorbehalten, damit HITACHI seinen Kunden die jeweils neuesten Innovationen präsentieren kann.

Sämtliche Anstrengungen wurden unternommen, um sicherzustellen, dass alle technischen Informationen ohne Fehler veröffentlicht worden sind. Für Druckfehler kann HITACHI jedoch keine Verantwortung übernehmen, da sie außerhalb ihrer Kontrolle liegen.

Français

Les caractéristiques publiées dans ce manuel peuvent être modifiées sans préavis, HITACHI souhaitant pouvoir toujours offrir à ses clients les dernières innovations.

Bien que tous les efforts sont faits pour assurer l'exactitude des caractéristiques, les erreurs d'impression sont hors du contrôle de HITACHI qui ne pourrait en être tenu responsable.

Italiano

Le specifiche di questo manuale sono soggette a modifica senza preavviso affinché HITACHI possa offrire ai propri clienti le ultime novità.

Sebbene sia stata posta la massima cura nel garantire la correttezza dei dati, HITACHI non è responsabile per eventuali errori di stampa che esulano dal proprio controllo.

Português

As especificações apresentadas neste manual estão sujeitas a alterações sem aviso prévio, de modo a que a HITACHI possa oferecer aos seus clientes, da forma mais expedita possível, as inovações mais recentes.

Apesar de serem feitos todos os esforços para assegurar que todas as especificações apresentadas são correctas, quaisquer erros de impressão estão fora do controlo da HITACHI, que não pode ser responsabilizada por estes erros eventuais.

Dansk

Specifikationerne i denne vejledning kan ændres uden varsel, for at HITACHI kan bringe de nyeste innovationer ud til kunderne.

På trods af alle anstrengelser for at sikre at alle specifikationer er korrekte, har HITACHI ikke kontrol over trykfejl, og HITACHI kan ikke holdes ansvarlig herfor.

Nederlands

De specificaties in deze handleiding kunnen worden gewijzigd zonder verdere kennisgeving zodat HITACHI zijn klanten kan voorzien van de nieuwste innovaties.

Iedere poging wordt ondernomen om te zorgen dat alle specificaties juist zijn. Voorkomende drukfouten kunnen echter niet door HITACHI worden gecontroleerd, waardoor HITACHI niet aansprakelijk kan worden gesteld voor deze fouten.

Svenska

Specifikationerna i den här handboken kan ändras utan föregående meddelande för att HITACHI ska kunna leverera de senaste innovationerna till kunderna.

Vi på HITACHI gör allt vi kan för att se till att alla specifikationer stämmer, men vi har ingen kontroll över tryckfel och kan därför inte hållas ansvariga för den typen av fel.

Ελληνικά

Οι προδιαγραφές του εγχειριδίου μπορούν να αλλάξουν χωρίς προειδοποίηση, προκειμένου η HITACHI να παρέχει τις τελευταίες καινοτομίες στους πελάτες της.

Αν και έχει γίνει κάθε προσπάθεια προκειμένου να εξασφαλιστεί ότι οι προδιαγραφές είναι σωστές, η HITACHI δεν μπορεί να ελέγξει τα τυπογραφικά λάθη και, ως εκ τούτου, δεν φέρει καμία ευθύνη για αυτά τα λάθη.



CAUTION

This product shall not be mixed with general house waste at the end of its life and it shall be retired according to the appropriated local or national regulations in a environmentally correct way.
Due to the refrigerant, oil and other components contained in heat pump, its dismantling must be done by a professional installer according to the applicable regulations. Contact to the corresponding authorities for more information.

PRECAUCIÓN

Este producto no se debe eliminar con la basura doméstica al final de su vida útil y se debe desechar de manera respetuosa con el medio ambiente de acuerdo con los reglamentos locales o nacionales aplicables.
Debido al refrigerante, el aceite y otros componentes contenidos en la bomba de calor, su desmontaje debe realizarlo un instalador profesional de acuerdo con la normativa aplicable. Para obtener más información, póngase en contacto con las autoridades competentes.

VORSICHT

Dass Ihr Produkt am Ende seiner Betriebsdauer nicht in den allgemeinen Hausmüll geworfen werden darf, sondern entsprechend den geltenden örtlichen und nationalen Bestimmungen auf umweltfreundliche Weise entsorgt werden muss.

Aufgrund des Kältemittels, Öls und anderer Komponenten in der Wärmepumpe muss ihr Ausbau von einem professionellen Installateur entsprechend der anwendbaren Vorschriften durchgeführt werden. Für weitere Informationen setzen Sie sich bitte mit den entsprechenden Behörden in Verbindung.

ADVERTISSEMENT

Ne doit pas être mélangé aux ordures ménagères ordinaires à la fin de sa vie utile et qu'il doit être éliminé conformément à la réglementation locale ou nationale, dans le plus strict respect de l'environnement.

En raison du frigorigène, de l'huile et des autres composants que contient la pompe à chaleur, son démontage doit être effectué par un installateur professionnel conformément aux réglementations en vigueur.

AVVERTENZE

Indicazioni per il corretto smaltimento del prodotto ai sensi della Direttiva Europea 2011/65/EU e D.Lgs 4 marzo 2014 n.27

Il simbolo del cassonetto barrato riportato sull'apparecchiatura indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti.

L'utente dovrà, pertanto, conferire l'apparecchiatura giunta a fine vita agli idonei centri di raccolta differenziata dei rifiuti elettronici ed elettrotecnici, oppure riconsegnarla al rivenditore al momento dell'acquisto di una nuova apparecchiatura di tipo equivalente.

L'adeguata raccolta differenziata delle apparecchiature dismesse, per il loro avvio al riciclaggio, al trattamento ed allo smaltimento ambientalmente compatibile, contribuisce ad evitare possibili effetti negativi sull'ambiente e sulla salute e favorisce il riciclo dei materiali di cui è composta l'apparecchiatura.

Non tentate di smontare il sistema o l'unità da soli poichè ciò potrebbe causare effetti dannosi sulla vostra salute o sull'ambiente.

Vogliate contattare l'installatore, il rivenditore, o le autorità locali per ulteriori informazioni.

Lo smaltimento abusivo del prodotto da parte dell'utente può comportare l'applicazione delle sanzioni amministrative di cui all'articolo 50 e seguenti del D.Lgs. n. 22/1997.

CUIDADO

O seu produto não deve ser misturado com os desperdícios domésticos de carácter geral no final da sua duração e que deve ser eliminado de acordo com os regulamentos locais ou nacionais adequados de uma forma correcta para o meio ambiente.

Por causa do refrigerante, do óleo e de outros componentes na bomba de calor, o desmantelamento deve ser realizado por um instalador profissional em conformidade com os regulamentos aplicáveis. Contacte as autoridades correspondentes para obter mais informações.

ADVASEL!

At produktet ikke må smides ud sammen med almindeligt husholdningsaffald, men skal bortskaffes i overensstemmelse med de gældende lokale eller nationale regler på en miljømæssig korrekt måde.

Da varmepumpen indeholder kølemiddel, olie samt andre komponenter, skal afmontering foretages af en fagmand i overensstemmelse med de gældende bestemmelser. Kontakt de pågældende myndigheder for at få yderligere oplysninger.

VOORZICHTIG

Dit houdt in dat uw product niet wordt gemengd met gewoon huisvuil wanneer u het weg doet en dat het wordt gescheiden op een milieuvriendelijke manier volgens de geldige plaatselijke en landelijke reguleringen.

Wegens de aanwezigheid van koelmiddel, olie en andere componenten in de warmtepomp moet het apparaat volgens de toepasselijke regelgeving door een professionele installateur worden gedemonteerd. Neem contact op met de betreffende overheidsdienst voor meer informatie.

FÖRSIKTIGHET

Det innebär att produkten inte ska slängas tillsammans med vanligt hushållsavfall utan kasseras på ett miljövänligt sätt i enlighet med gällande lokal eller nationell lagstiftning.

Eftersom varmepumpen innehåller kylmedel, oljor och andra komponenter, måste den demonteras av en behörig installatör i enlighet med gällande föreskrifter. Ta kontakt med ansvarig myndighet om du vill ha mer information.

ΠΡΟΣΟΧΗ

Σημαίνει ότι το προϊόν δεν θα πρέπει να αναμιχθεί με τα διάφορα οικιακά απορρίμματα στο τέλος του κύκλου ζωής του και θα πρέπει να αποσυρθεί σύμφωνα με τους κατάλληλους τοπικούς ή εθνικούς κανονισμούς και με τρόπο φιλικό προς το περιβάλλον.

Λόγω του ψυκτικού, του λαδιού και άλλων εξαρτημάτων που περιλαμβάνονται στην αντλία θέρμανσης, η αποσυναρμολόγησή του πρέπει να γίνει από εξουσιοδοτημένο επαγγελματία τεχνικό, σύμφωνα με τους ισχύοντες κανονισμούς. Για περισσότερες λεπτομέρειες, επικοινωνήστε με τις αντίστοιχες αρχές.



English

Following Regulation EU No. 517/2014 on Certain Fluorinated Greenhouse gases, it is mandatory to fill in the label attached to the unit with the total amount of refrigerant charged on the installation.

Do not vent R32 into the atmosphere: R32 are fluorinated greenhouse gases covered by the Kyoto protocol global warming potential (GWP) R32 = 675.

Tn of CO2 equivalent of fluorinated greenhouse gases contained is calculated by indicated GWP * Total Charge (in kg) indicated in the product label and divided by 1000.

Español

De acuerdo con el reglamento UE N° 517/2014 sobre determinados gases fluorados de efecto invernadero, es obligatorio rellenar la etiqueta suministrada con la unidad con la cantidad total de refrigerante con que se ha cargado la instalación.

No descargue el R32 en la atmósfera: R32 son gases fluorados cubiertos por el protocolo de Kyoto con un potencial de calentamiento global (GWP) = 675.

Las Tn de CO2 equivalente de gases fluorados de efecto invernadero contenidos se calcula por el PCA indicado * Carga Total (en kg) indicada en la etiqueta del producto y dividida por 1000.

Deutsch

Folgende Verordnung EG Nr. 517/2014 Bestimmte fluorierte Treibhausgase, auf dem Schild, das sich am Gerät befindet, muss die Gesamtkältemittelmenge verzeichnet sein, die bei der Installation eingefüllt wird.

Lassen sie R32 nicht in die luft entweichen: R32 sind fluorierte treibhausgase, die durch das Kyoto-protokoll erfasst sind. Sie besitzen folgendes treibhauspotential (GWP) R32 = 675.

Die Menge an CO2-Äquivalent fluorierte Treibhausgase enthalten (in Tn) wird von GWP * die auf dem Produktetikett angegebenen Gesamtfüllmenge (in kg) und durch 1000 geteilt berechnet.

Français

En fonction de la Réglementation CE N° 517/2014 concernant certains gaz à effet de serre fluorés, il est obligatoire de remplir l'étiquette attachée à l'unité en indiquant la quantité de fluide frigorigène qui a été chargée à l'installation.

Ne laissez pas le R32 se répandre dans l'atmosphère: le R32 sont des gaz à effet de serre fluorés, couverts par le protocole de Kyoto avec un potentiel de réchauffement global (PRG) R32 = 675.

Les Tn d'équivalent-CO2 de gaz à effet de serre fluorés contenus est calculé par le PRG * Charge Totale (en kg) indiquée dans l'étiquette du produit et divisé par 1,000.

Italiano

In base alla Normativa EC N° 517/2014 su determinati gas fluorurati ad effetto serra, è obbligatorio compilare l'etichetta che si trova sull'unità inserendo la quantità totale di refrigerante caricato nell'installazione.

Non scaricare R32 nell'atmosfera: R32 sono gas fluorurati ad effetto serra che in base al protocollo di Kyoto presentano un potenziale riscaldamento globale (GWP) R32 = 675.

Le Tn di CO2 equivalente di gas fluorurati ad effetto serra contenuti si calcola dal GWP indicato * Carica Totale (in kg) indicato nella etichetta del prodotto e diviso per 1000.

Português

Em conformidade com a Regulamentação da UE N° 517/2014 sobre determinados gases fluorados com efeito de estufa, é obrigatório preencher a etiqueta afixada na unidade com a quantidade total de refrigerante carregada na instalação.

Não ventilar R32 para a atmosfera: o R32 são gases fluorados com efeito de estufa abrangidos pelo potencial de aquecimento global (GWP) do protocolo de Quioto = 675.

Tn de CO2 equivalente de gases fluorados com efeito de estufa é calculado pelo GWP indicado * Carga Total (em kg) indicado no rótulo de produto e dividido por 1000.

Dansk

Henhold til Rådets forordning (EF) nr. 517/2014 om visse fluorholdige drivhusgasser, skal installationens samlede mængde kølevæske fremgå af den etiket, der er klæbet fast på enheden.

Slip ikke R32 ud i atmosfæren: R32 er fluorholdige drivhus-gasser, der er omfattet af Kyoto-protokollens globale opvarmningspotentiale (GWP) R32 = 675.

Tn af CO2-ækvivalent af fluorholdige drivhusgasser er beregnet ved angivet GWP * Samlet Charge (i kg) er angivet i produktets etiket og divideret med 1000.

Nederlands

Conform richtlijn EC N° 517/2014 voor bepaalde fluorbroeikasgassen, dient u de tabel in te vullen op de unit met het totale koelmiddelvolume in de installatie. Laat geen R32 ontsnappen in de atmosfeer: R32 zijn fluorbroeikasgassen die vallen onder het protocol van Kyoto inzake klimaatverandering global warming potential (GWP) R32 = 675.

Tn van CO2-equivalent van fluorbroeikasgassen wordt berekend door het aangegeven GWP * Totale Hoeveelheid (in kg) aangegeven in het product label en gedeeld door 1000.

Svenska

Enligt reglering EC N° 517/2014 om vissa fluorhaltiga växthusgaser, måste etiketten som sitter på enheten fyllas i med sammanlagd mängd kylmedium som fyllts på under installationen.

Släpp inte ur R32 i atmosfären: R32 är fluorhaltiga växthus-gaser som omfattas av Kyotoprotokollet om global uppvärmnings-potential (GWP) R32 = 675.

Tn av CO2-ekvivalenter fluorhaltiga växthusgaser beräknas genom indikeras GWP * Total Påfyllning (i kg) som anges i produktetiketten och divideras med 1000.


Ελληνικά

Σύμφωνα με τον Κανονισμό 517/2014/EK για για ορισμένα φθοριούχα αέρια θερμοκηπίου, είναι υποχρεωτική η συμπλήρωση της επισήμανσης που επισυνάπτεται στη μονάδα με το συνολικό ποσό ψυκτικού που εισήχθη κατά την εγκατάσταση.

Μην απελευθερώνετε R32 στην ατμόσφαιρα. Τα R32 είναι φθοριούχα αέρια του θερμοκηπίου που εμπίπτουν στο πρωτοκόλλο του κυστο δυναμικο θερμανσης του πλανητη (GWP) R32 = 675.

Τη ισοδύναμου CO2 φθοριούχων αερίων θερμοκηπίου που περιέχονται υπολογίζεται από υποδεικνύεται GWP * Συνολική πλήρωση (σε kg) που αναφέρεται στην ετικέτα του προϊόντος και χωρίζονται από το 1000.

MODELS CODIFICATION	Important note: Please, check, according to the model name, which is your heat pump type, how it is abbreviated and referred to in this instruction manual. This Installation and Operation Manual is only related to RASM-VRE Outdoor Units.
CODIFICACIÓN DE MODELOS	Nota importante: compruebe, de acuerdo con el nombre del modelo, el tipo de bomba de calor, su abreviatura y su referencia en el presente manual de instrucciones. Este Manual de instalación y funcionamiento sólo está relacionado con unidades externas RASM-VRE.
MODELLCODES	Wichtiger Hinweis: Bitte stellen Sie anhand der Modellbezeichnung den Typ der Wärmepumpe und das entsprechende, in diesem Technischen Handbuch verwendete Kürzel fest. Dieses Installations- und Betriebshandbuch bezieht sich nur auf RASM-VRE Außengeräten.
CODIFICATION DES MODÈLES	Note importante : veuillez déterminer, d'après le nom du modèle, quel est votre type de pompe à chaleur et quelle est son abréviation et référence dans ce manuel d'instruction. Ce manuel d'installation et de fonctionnement ne concernent que les unités intérieures groupes extérieurs RASM-VRE.
CODIFICAZIONE DEI MODELLI	Nota importante: controllare in base al modello il tipo di pompa di calore, la descrizione e il tipo di abbreviazione utilizzati nel manuale di istruzioni. Questo manuale di installazione e di funzionamento fa riferimento alla unità esterne RASM-VRE.
CODIFICAÇÃO DE MODELOS	Nota Importante: de acordo com o nome do modelo, verifique o tipo da sua bomba de calor e a respetiva abreviatura e menção neste manual de instruções. Este manual de instalação e de funcionamento só está relacionado com a unidades exteriores RASM-VRE.
MODELKODIFICERING	Vigtig information: Kontrollér venligst din varmepumpetype i henhold til modelnavnet, hvordan den forkortes, og hvilken reference den har i denne vejledning. Denne bruger- og monteringsvejledning gælder kun RASM-VRE-udendørsenheder.
CODERING VAN DE MODELLEN	Belangrijke opmerking: Controleer aan de hand van de modelnaam welk type warmtepomp u heeft, hoe de naam wordt afgekort en hoe ernaar wordt verwezen in deze instructiehandleiding. Deze Installatie- en bedieningshandleiding heeft alleen betrekking op buitenunits RASM-VRE.
MODELLER	Viktigt! Kontrollera med modellnamnet vilken typ av värmepump du har, hur den förkortas och hur den anges i den här handboken. Denna handbok för installation och användning gäller endast för utomhusenheter RASM-VRE.
ΚΩΔΙΚΟΠΟΙΗΣΗ ΜΟΝΤΕΛΩΝ	Σημαντική σημείωση: Ελέγξτε, σύμφωνα με το όνομα μοντέλου, τον τύπο της δικής σας αντλίας θέρμανσης και με ποια σύντμηση δηλώνεται και αναφέρεται σε αυτό το εγχειρίδιο. Αυτό το εγχειρίδιο εγκατάστασης και λειτουργίας αφορά μόνο τις Εξωτερικές Μονάδες RASM-VRE.

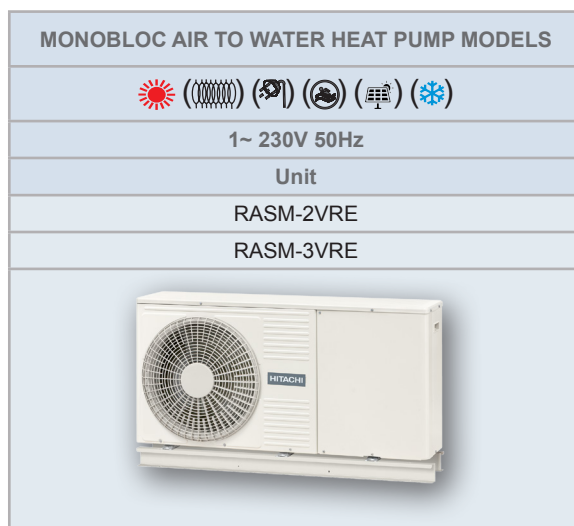

i NOTE

Icons between brackets mean possible extra operations to the factory-supplied operations. For cooling operation, refer to the Cooling kit accessory for YUTAKI M units.

i NOTA

Los iconos entre paréntesis representan posibles operaciones adicionales con respecto a las operaciones suministradas de fábrica. Para el funcionamiento en enfriamiento, consulte el accesorio de kit de enfriamiento para unidades YUTAKI M.

i HINWEIS

Die Symbole in Klammern stellen mögliche zusätzliche Betrieben in Bezug auf die gelieferten Fabrikbetrieb. Für den Kühlbetrieb, beziehen Sie sich auf das Cooling Kit Zubehör für YUTAKI M-Einheiten.

i REMARQUE

Les icônes entre parenthèses représentent des opérations supplémentaires possibles en ce qui concerne les opérations fournies. Pour l'opération de refroidissement, reportez-vous à l'accessoire de kit de refroidissement pour les unités YUTAKI M.

i NOTA

Icone in parentesi rappresentano possibili operazioni aggiuntive rispetto alle operazioni in dotazione di fabbrica. Per il funzionamento di raffreddamento, fare riferimento al kit di raffreddamento accessorio per unità YUTAKI M.

i NOTA

Ícones entre parênteses representam possíveis operações adicionais no que diz respeito às operações fornecidas de fábrica. Para a operação de arrefecimento, consulte o kit de acessório de arrefecimento para unidades YUTAKI M.

i BEMÆRK

Ikoner i parentes repræsenterer eventuelle yderligere operationer i forhold til de medfølgende fabrikken operationer. Para a operação de refrigeração, consulte o resfriamento acessório de kit para unidades YUTAKI M.

i OPMERKING

Pictogrammen tussen haakjes betekenen mogelijk extra behandeling om de fabriek geleverde operaties. Voor koeling, wordt verwezen naar de accessoire kit voor koeling voor YUTAKI M units.

i OBS!

Ikoner inom parentes betyder eventuella extra operationer till fabrikslevererad verksamhet. För kyl drift, se Cooling sats tillbehör till YUTAKI M-enheter.

i ΣΗΜΕΙΩΣΗ

Εικόνες στις παρενθέσεις αντιπροσωπεύουν πιθανές πρόσθετες λειτουργίες σε σχέση με τις παρεχόμενες εργασίες του εργοστασίου. Για τη λειτουργία ψύξης, ανατρέξτε στο Ψύξη εξάρτημα kit για τις μονάδες YUTAKI M.

English

WARNING

BURST HAZARD

Do not allow air or any gas mixture containing oxygen into refrigerant cycle (i.e. piping)

RISK OF EXPLOSION

The compressor must be stopped before removing the refrigerant pipes.

All service valves must be fully closed after pumping down operation.

WARNING

This symbol displayed on the unit indicates that this appliance is filled with R32, an odourless flammable refrigerant gas with low burning velocity (A2L class pursuant to ISO 817). If the refrigerant is leaked, there is a possibility of ignition if it enters in contact with an external ignition source.

CAUTION

This symbol displayed on the unit indicates that this appliance shall be handled by authorized service personnel only, referring to the Installation Manual.

CAUTION

This symbol displayed on the unit indicates that there is relevant information included in the Operation Manual and/or Installation Manual.

CAUTION

For more information, see the installer and user reference guide.

Español

ADVERTENCIA

RIESGO DE EXPLOSIÓN

Evite la entrada de aire o cualquier mezcla de gases que contenga oxígeno en el ciclo de refrigerante, por ejemplo, en las tuberías.

RIESGO DE EXPLOSIÓN

Antes de retirar las tuberías de refrigerante debe detener el compresor.

Tras recuperar el refrigerante todas las válvulas de servicio deben estar completamente cerradas.

ADVERTENCIA

Este símbolo mostrado en el aparato indica que este está cargado con R32, un gas refrigerante inflamable e inodoro con una velocidad de combustión lenta (Clase A2L de acuerdo con ISO 817). Una fuga de refrigerante puede provocar un incendio si entra en contacto con una fuente de combustión externa.

PRECAUCIÓN

Este símbolo mostrado en el aparato indica que este debe ser manipulado únicamente por personal de un servicio autorizado con el soporte del manual de instalación.

PRECAUCIÓN

Este símbolo mostrado en el aparato indica que los manuales de funcionamiento y/o de instalación contienen información importante.

PRECAUCIÓN

Para más información, consulte la guía de referencia del instalador y el usuario.

Deutsch

WARNUNG

BERSTGEFAHR

Lassen Sie nicht zu, dass Luft oder eine Sauerstoff enthaltene Gas-mischung in den Kältemittelkreislauf (z. B. Rohrleitungen) gelangt.

EXPLOSIONSGEFAHR

Der Kompressor muss abgeschaltet werden, bevor die Kältemittel-leitungen entfernt werden.

Alle Betriebsventile müssen nach dem Abpumpbetrieb vollständig geschlossen sein.

WARNUNG

Dieses auf dem Gerät angezeigte Symbol zeigt an, dass das Gerät ist mit dem R32 geruchlosen brennbaren Kältemittel mit niedriger Brenngeschwindigkeit gefüllt (Klasse A2L gemäß ISO 817). Bei einem Kältemittelaustritt besteht die Gefahr der Entzündung, wenn das Kältemittel in Kontakt mit einer äußeren Zündquelle kommt.

VORSICHT

Dieses auf dem Gerät angezeigte Symbol zeigt an, dass dieses Gerät ein entzündbares Kältemittel verwendet. Bei einem Kältemittelaustritt besteht die Gefahr der Entzündung, wenn das Kältemittel in Kontakt mit einer äußeren Zündquelle kommt.

VORSICHT

Dieses auf dem Gerät angezeigte Symbol zeigt an, dass wichtige Informationen im Betriebshandbuch und/oder Installationshandbuch enthalten sind.

VORSICHT

Weitere Informationen finden Sie in der Referenzanleitung für Installierer und Nutzer.

Français

AVERTISSEMENT

DANGER D'ÉCLATEMENT

Évitez que de l'air ou un mélange de gaz contenant de l'oxygène ne pénètre dans le cycle frigorifique (c.-à-d. tuyauterie)

RISQUE D'EXPLOSION

Veillez à arrêter le compresseur avant de retirer les tuyauteries frigorifiques.

Veillez à fermer complètement toutes les vannes de service après la vidange.

AVERTISSEMENT

Ce symbole affiché sur l'appareil indique que l'appareil est chargé avec R32, un gaz frigorigène inflammable sans odeur à basse vitesse de combustion (Classe A2L selon ISO 817). En cas de fuite de frigorigène, il existe un risque d'incendie si celui-ci est exposé à une source d'inflammation externe.

ATTENTION

Ce symbole affiché sur l'appareil indique que seul le personnel de maintenance autorisé doit manipuler l'équipement, en se reportant au manuel d'installation.

ATTENTION

Ce symbole affiché sur l'appareil indique que le manuel de fonctionnement et/ou le manuel d'installation contient des informations importantes.

ATTENTION

Pour plus d'informations, reportez-vous au guide de l'utilisateur.

Italiano

AVVERTENZA

PERICOLO DI SCOPPIO

Fare in modo che all'interno del ciclo di refrigerazione non entrino aria o qualsiasi miscela di gas contenente ossigeno (per es. le tubazioni).

RISCHIO DI ESPLOSIONE

Il compressore deve essere arrestato prima di rimuovere i tubi del refrigerante.

Tutte le valvole di servizio devono essere completamente chiuse dopo lo svuotamento della pompa.

AVVERTENZA

Questo simbolo visualizzato sull'unità indica che l'unità è caricata con R32, un gas refrigerante infiammabile e inodore con una velocità di combustione lenta (Classe A2L secondo ISO 817). Una perdita di refrigerante può provocare un incendio se entra a contatto con una fonte di combustione esterna.

AVVERTENZA

Questo simbolo visualizzato sull'unità indica che l'unità deve essere gestita solo da personale di servizio autorizzato, facendo riferimento al Manuale di Installazione.

AVVERTENZA

Questo simbolo visualizzato sull'unità indica che ci sono informazioni rilevanti incluse nel Manuale d'uso e/o nel Manuale di Installazione.

AVVERTENZA

Per ulteriori informazioni, consultare il programma di installazione e la guida di riferimento per l'utente.

Português

ATENÇÃO

PERIGO DE REBENTAMENTO

Não permitir a entrada de ar ou de qualquer mistura de gás com oxigénio para o ciclo de refrigeração (isto é, para tubagem).

RISCO DE EXPLOÇÃO

O compressor deve ser desligado antes da remoção dos tubos de refrigerante.

As válvulas de manutenção devem estar completamente fechadas depois da eliminação do refrigerante.

ATENÇÃO

Este símbolo mostrado na unidade indica que a unidade contém R32, um gás refrigerante inflamável e inodoro com uma baixa velocidade de queima (Classe A2L de acordo com ISO 817). Em caso de fuga de refrigerante, existe a possibilidade de ignição se entrar em contacto com uma fonte de ignição externa.

CUIDADO

Este símbolo mostrado na unidade indica que a unidade deve ser manuseada apenas por pessoal autorizado, mediante consulta do Manual de Instalação.

CUIDADO

Este símbolo mostrado na unidade indica que o Manual de Funcionamento e/ou Instalação inclui informação relevante.

CUIDADO

Para mais informação, consulte o guia de referência do utilizador e do instalador.

Dansk

ADVARSEL

BRISTEFARE

Lad ikke luft eller en gasblanding, der indeholder ilt, komme ind i kølemiddelcyklussen (dvs. rørføringen)

RISIKO FOR EKSPLOSION

Kompressoren skal stoppes, inden kølemiddelrørene fjernes.

Alle serviceventiler skal være helt lukkede, når kølemidlet er blevet fjernet.

ADVARSEL

Dette symbol vises på enheden angiver, at enheden er fyldt med R32, en brændbar og lugtfri kølemiddelgas med en langsom forbrændingshastighed (klasse A2L i henhold til ISO 817). Udslip af kølemiddel kan forårsage brand, hvis kølemidlet kommer i kontakt med en ekstern antændelseskilde.

FORSIGTIG

Dette symbol vises på enheden angiver, at enheden kun skal håndteres af autoriseret servicepersonale under henvisning til installationsmanualen.

FORSIGTIG

Dette symbol vises på enheden angiver, at der er relevante oplysninger, der er indeholdt i drifts- og/eller installationsmanualen.

FORSIGTIG

For yderligere information se installations- og brugermanual.

Nederlands

WAARSCHUWING

BARSTGEVAAR

Laat geen lucht of een gasmengsel dat zuurstof bevat in de koelmiddelcyclus (d.w.z. leidingen).

EXPLOSIEGEVAAR

De compressor moet worden gestopt alvorens de koelmiddelpijpen te verwijderen.

Alle onderhoudskranen moeten volledig gesloten zijn na het pompen.

WAARSCHUWING

Dit symbool op het apparaat geeft aan dat het apparaat is gevuld met R32, een geurloos ontvlambaar koelmiddel met een lage brandsnelheid (klasse A2L volgens ISO 817). Als het koelmiddel lekt, kan het ontbranden wanneer het in contact komt met een externe ontstekingsbron.

LET OP

Dit symbool op het apparaat geeft aan dat het apparaat alleen door bevoegd personeel mag worden gebruikt, met verwijzing naar de installatiehandleiding.

LET OP

Dit symbool op het apparaat geeft aan dat er relevante informatie is opgenomen in de gebruiksaanwijzing en / of installatiehandleiding.

LET OP

Meer informatie hierover vindt u in de installatie en gebruikersgids.

Svenska

VARNING

SPRÄNGRISK

Låt ingen luft eller gasblandning innehållande syra komma in i kylmedelcykeln (t.ex. rörlledning).

RISK FÖR EXPLOSION

Kompression måste stängas av innan kylrören avlägsnas.

Alla serviceventiler måste stängas av ordentligt efter nedpumpning.

VARNING

Den här symbolen som visas på enheten indikerar att enheten är fylld med R32, ett luktfritt brandfarligt kylmedel med låg förbränningshastighet (A2L-klass enligt ISO 817). Om kylmedel läcker ut finns det risk för antändning om det kommer i kontakt med en extern antändningskälla.

VARNING

Den här symbolen som visas på enheten indikerar att enheten endast får hanteras av auktoriserad servicepersonal och i enlighet med installationsmanualen.

VARNING

Den här symbolen som visas på enheten indikerar att användarmanualen/installationsmanualen innehåller viktig information.

VARNING

För mer information, se referensguiden för installation och användning.

Ελληνικά

ΠΡΟΕΙΔΟΠΟΙΗΣΗ

ΚΙΝΔΥΝΟΣ ΦΩΤΙΑΣ

Μην επιτρέψετε την είσοδο αέρα ή οποιοδήποτε μείγμα αερίου που περιέχει οξυγόνο στον κύκλο ψυκτικού μέσου (δηλαδή σωλήνωση).

ΚΙΝΔΥΝΟΣ ΕΚΡΗΞΗΣ

Ο συμπιεστής πρέπει να έχει σταματήσει προτού αφαιρέσετε τους σωλήνες ψυκτικού μέσου.

Όλες οι βαλβίδες λειτουργίας πρέπει να είναι πλήρως κλειστές μετά την λειτουργία άντλησης.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ

Αυτό το σύμβολο που εμφανίζεται στη μονάδα δείχνει ότι η μονάδα είναι γεμάτη με R32, ένα άοσμο εύφλεκτο ψυκτικό με χαμηλή ταχύτητα καύσης (κλάση A2L σύμφωνα με το πρότυπο ISO 817). Η διαρροή του ψυκτικού μέσου μπορεί να προκαλέσει πυρκαγιά αν έρθει σε επαφή με ένα εξωτερικό μέσο.

ΠΡΟΣΟΧΗ

Αυτό το σύμβολο που εμφανίζεται στη μονάδα δείχνει ότι η μονάδα πρέπει να πραγματοποιείται μόνο από εγκεκριμένο προσωπικό σύμφωνα με το εγχειρίδιο εγκατάστασης.

ΠΡΟΣΟΧΗ

Αυτό το σύμβολο που εμφανίζεται στη μονάδα δείχνει ότι υπάρχουν σχετικές πληροφορίες στο εγχειρίδιο λειτουργίας και/ή στο εγχειρίδιο εγκατάστασης.

ΠΡΟΣΟΧΗ

Για περισσότερες πληροφορίες δείτε τις οδηγίες για τον εγκαταστάτη και τον χρήστη.

INDEX

- 1 GENERAL INFORMATION
- 2 SAFETY
- 3 IMPORTANT NOTICE
- 4 TRANSPORTATION AND HANDLING
- 5 BEFORE OPERATION
- 6 GENERAL DIMENSIONS
- 7 UNIT INSTALLATION
- 8 REFRIGERANT AND WATER PIPING
- 9 DRAIN PIPING
- 10 ELECTRICAL AND CONTROL SETTINGS
- 11 COMMISSIONING
- 12 UNIT CONTROLLER
- 13 MAIN SAFETY DEVICES

ÍNDICE

- 1 INFORMACIÓN GENERAL
- 2 SEGURIDAD
- 3 AVISO IMPORTANTE
- 4 TRANSPORTE Y MANIPULACIÓN
- 5 ANTES DEL FUNCIONAMIENTO
- 6 DIMENSIONES GENERALES
- 7 INSTALACIÓN DE LA UNIDAD
- 8 TUBERÍAS DE AGUA Y DE REFRIGERANTE
- 9 TUBERÍA DE DESAGÜE
- 10 AJUSTES ELÉCTRICOS Y DE CONTROL
- 11 PUESTA EN MARCHA
- 12 CONTROLADOR DE LA UNIDAD
- 13 PRINCIPALES DISPOSITIVOS DE SEGURIDAD

INHALT

- 1 ALLGEMEINE INFORMATIONEN
- 2 SICHERHEIT
- 3 WICHTIGER HINWEIS
- 4 TRANSPORT UND BEDIENUNG
- 5 VOR DEM BETRIEB
- 6 ALLGEMEINE ABMESSUNGEN
- 7 GERÄTEINSTALLATION
- 8 KÄLTEMITTEL- UND WASSERLEITUNGEN
- 9 ABFLUSSLEITUNGEN
- 10 ELEKTRISCHE UND STEUERUNGS-EINSTELLUNGEN
- 11 INBETRIEBNAHME
- 12 GERÄTESTEUERUNG
- 13 GRUNDLEGENDE SICHERHEITSVORRICHTUNGEN

INDEX

- 1 INFORMATIONS GÉNÉRALES
- 2 SÉCURITÉ
- 3 REMARQUE IMPORTANTE
- 4 TRANSPORT ET MANIPULATION
- 5 AVANT LE FONCTIONNEMENT
- 6 DIMENSIONS GÉNÉRALES
- 7 INSTALLATION DES UNITÉS
- 8 TUYAUTERIE FRIGORIFIQUE ET D'EAU
- 9 TUYAU D'ÉVACUATION
- 10 RÉGLAGES DE COMMANDE ET ÉLECTRIQUES
- 11 MISE EN SERVICE
- 12 CONTRÔLEUR D'UNITÉ
- 13 PRINCIPAUX DISPOSITIFS DE SÉCURITÉ

INDICE

- 1 INFORMAZIONI GENERALI
- 2 SICUREZZA
- 3 NOTA IMPORTANTE
- 4 TRASPORTO E MOVIMENTAZIONE
- 5 PRIMA DEL FUNZIONAMENTO
- 6 DIMENSIONI GENERALI
- 7 INSTALLAZIONE DELL'UNITÀ
- 8 LINEE DELL'ACQUA E DEL REFRIGERANTE
- 9 LINEA DI DRENAGGIO
- 10 IMPOSTAZIONI ELETTRICHE E DI CONTROLLO
- 11 MESSA IN ESERCIZIO
- 12 DISPOSITIVO DI CONTROLLO DELL'UNITÀ
- 13 PRINCIPALI DISPOSITIVI DI SICUREZZA

ÍNDICE

- 1 INFORMAÇÃO GERAL
- 2 SEGURANÇA
- 3 NOTA IMPORTANTE
- 4 TRANSPORTE E MANUSEAMENTO
- 5 ANTES DE UTILIZAR A UNIDADE
- 6 DIMENSÕES GERAIS
- 7 INSTALAÇÃO DA UNIDADE
- 8 TUBAGEM DE REFRIGERANTE E DE ÁGUA
- 9 TUBAGEM DE DESCARGA
- 10 AJUSTES DE CONTROLO E ELÉCTRICOS
- 11 COLOCAÇÃO EM FUNCIONAMENTO
- 12 CONTROLADOR DA UNIDADE
- 13 DISPOSITIVOS DE SEGURANÇA PRINCIPAIS

INDHOLDSFORTEGNELSE

- 1 GENEREL INFORMATION
- 2 SIKKERHED
- 3 VIGTIG INFORMATION
- 4 TRANSPORT OG HÅNTERING
- 5 FØR DRIFT
- 6 GENERELLE MÅL
- 7 INSTALLATION AF ENHED
- 8 KØLEMIDDEL- OG VANDRØR
- 9 AFLØBSRØR
- 10 ELEKTRISKE OG KONTROLINDSTILLINGER
- 11 IDRIFTSÆTTELSE
- 12 STYREENHED
- 13 PRIMÆRE SIKKERHEDSANORDNINGER

INHOUDSOPGAVE

- 1 ALGEMENE INFORMATIE
- 2 VEILIGHEID
- 3 BELANGRIJKE MEDEDELING
- 4 TRANSPORT EN HANTERING
- 5 VOORDAT U HET SYSTEEM IN GEBRUIK NEEMT
- 6 ALGEMENE AFMETINGEN
- 7 INSTALLATIE VAN DE UNIT
- 8 KOUEMIDDEL- EN WATERLEIDINGEN
- 9 AFVOERLEIDING
- 10 ELEKTRISCHE EN BESTURINGSINSTELLINGEN
- 11 INBEDRIJFSTELLING
- 12 BESTURING VAN UNIT
- 13 BELANGRIJKSTE VEILIGHEIDSVoorzieningen

INNEHÅLLSFÖRTECKNING

- 1 ALLMÄN INFORMATION
- 2 SÄKERHET
- 3 VIKTIGT MEDDELANDE
- 4 TRANSPORT OCH HANTERING
- 5 FÖRE DRIFT
- 6 ALLMÄNA MÅTT
- 7 INSTALLATION AV ENHET
- 8 KYL- OCH VATTENRÖR
- 9 DRÄNERINGSRÖR
- 10 EL- OCH STYRINNSTÄLLNINGAR
- 11 IGÅNGKÖRNING
- 12 ENHETENS STYRMODUL
- 13 HUVUDSAKLIGA SÄKERHETSANORDNINGAR

EYPETHPIO

- 1 ΓΕΝΙΚΕΣ ΠΛΗΡΟΦΟΡΙΕΣ
- 2 ΑΣΦΑΛΕΙΑ
- 3 ΣΗΜΑΝΤΙΚΗ ΠΑΡΑΤΗΡΗΣΗ
- 4 ΜΕΤΑΦΟΡΑ ΚΑΙ ΧΕΙΡΙΣΜΟΣ
- 5 ΠΡΙΝ ΤΗ ΛΕΙΤΟΥΡΓΙΑ
- 6 ΓΕΝΙΚΕΣ ΔΙΑΣΤΑΣΕΙΣ
- 7 ΕΓΚΑΤΑΣΤΑΣΗ ΜΟΝΑΔΩΝ
- 8 ΨΥΚΤΙΚΟ ΚΑΙ ΣΩΛΗΝΩΣΕΙΣ ΝΕΡΟΥ
- 9 ΣΩΛΗΝΩΣΕΙΣ ΑΠΟΧΕΤΕΥΣΗΣ
- 10 ΡΥΘΜΙΣΕΙΣ ΗΛΕΚΤΡΙΚΕΣ ΚΑΙ ΕΛΕΓΧΟΥ
- 11 ΕΝΑΡΞΗ ΛΕΙΤΟΥΡΓΙΑΣ
- 12 ΧΕΙΡΙΣΤΗΡΙΟ ΜΟΝΑΔΑΣ
- 13 ΣΥΣΚΕΥΕΣ ΑΣΦΑΛΕΙΑΣ

EN

The English version is the original one; other languages are translated from English. Should any discrepancy occur between the English and the translated versions, the English version shall prevail.

ES

La versión en inglés es la original, y las versiones en otros idiomas son traducciones de la inglesa. En caso de discrepancias entre la versión inglesa y las versiones traducidas, prevalecerá la versión inglesa.

DE

Die englische Fassung ist das Original, und die Fassungen in anderen Sprachen werden aus dem Englischen übersetzt. Sollten die englische und die übersetzten Fassungen voneinander abweichen, so hat die englische Fassung Vorrang.

FR

La version anglaise est la version originale; les autres langues sont traduites de l'anglais. En cas de divergence entre les versions anglaise et traduite, la version anglaise prévaudra.

IT

La versione inglese è l'originale e le versioni in altre lingue sono traduzioni dall'inglese. In caso di divergenze tra la versione inglese e quelle tradotte, fa fede la versione inglese.

PT

A versão inglesa é a original; as versões em outras línguas são traduzidas do inglês. Em caso de divergência entre a versão em língua inglesa e as versões traduzidas, faz fé a versão em língua inglesa.

DA

Den engelske udgave er originalen, og udgaverne på andre sprog er oversat fra engelsk. Hvis der forekommer uoverensstemmelser mellem den engelske og den oversatte sprogudgave, vil den engelske udgave være gældende.

NL

De Engelse versie is de originele; andere talen zijn vertaald uit het Engels. In geval van verschillen tussen de Engelse versie en de vertaalde versies, heeft de Engelse versie voorrang.

SV

Den engelska versionen är originalet, och versionerna på andra språk är från engelska översättningar. I händelse av bristande överensstämmelse mellan den engelska och den översatta versionerna, skall den engelska versionen vara giltig.

EL

Η αγγλική έκδοση είναι το πρωτότυπο και οι εκδόσεις σε άλλες γλώσσες μεταφράζονται από τα αγγλικά. Σε περίπτωση που διαπιστωθούν διαφορές μεταξύ της αγγλικής και της μεταφρασμένης έκδοσης, η αγγλική έκδοση είναι επικρατέστερη.

EN	English	Original version
ES	Español	Versión traducida
DE	Deutsch	Übersetzte Version
FR	Français	Version traduite
IT	Italiano	Versione tradotta
PT	Português	Versão traduzida
DA	Dansk	Oversat version
NL	Nederlands	Vertaalde versie
SV	Svenska	Översatt version
EL	Ελληνικά	Μεταφρασμένη έκδοση

1 GENERAL INFORMATION

No part of this publication may be reproduced, copied, filed or transmitted in any shape or form without the permission of Johnson Controls-Hitachi Air Conditioning Spain, S.A.U.

Within the policy of continuous improvement of its products, Johnson Controls-Hitachi Air Conditioning Spain, S.A.U. reserves the right to make changes at any time without prior notification and without being compelled to introducing them into products previously sold. This document may therefore have been subject to amendments during the life of the product.

HITACHI makes every effort to offer correct, up-to-date documentation. Despite this, printing errors cannot be controlled by HITACHI and are not its responsibility.

As a result, some of the images or data used to illustrate this document may not refer to specific models. No claims will be accepted based on the data, illustrations and descriptions included in this manual.

2 SAFETY

2.1 APPLIED SYMBOLS

During normal heat pump system design work or unit installation, greater attention must be paid in certain situations requiring particular care in order to avoid damage to the unit, the installation or the building or property.

Situations that pose a risk to the safety of those in the surrounding area or to the unit itself are clearly indicated in this manual.

A series of special symbols are used to clearly identify these situations.

Pay close attention to these symbols and to the messages following them, as your safety and that of others depends on it.

 ***This appliance is filled with R32, an odourless low burning velocity refrigerant. If the refrigerant is leaked, there is a possibility of ignition if it enters in contact with an external ignitions source.***

DANGER

- *The text following this symbol contains information and instructions relating directly to your safety.*
- *Not taking these instructions into account could lead to serious, very serious or even fatal injuries to you and others.*

In the texts following the danger symbol you can also find information on safety procedures during unit installation.

DANGER

 ***This symbol shows that this equipment uses a low burning velocity refrigerant. If the refrigerant is leaked, there is a possibility of ignition if it enters in contact with an external ignition source.***

RISK OF EXPLOSION

The compressor must be stopped before removing the refrigerant pipes.

All service valves must be fully closed after pumping down operation.

CAUTION

- *The text following this symbol contains information and instructions relating directly to your safety.*
- *Not taking these instructions into account could lead to minor injuries to you and others.*
- *Not taking these instructions into account could lead to unit damage.*

In the texts following the caution symbol you can also find information on safety procedures during unit installation.

NOTE

- *The text following this symbol contains information or instructions that may be of use or that require a more thorough explanation.*
- *Instructions regarding inspections to be made on unit parts or systems may also be included.*

Symbol	Explanation
	Before installation, read the installation and operation manual, and the wiring instruction sheet.
	Before performing maintenance and service tasks, read the service manual.
	For more information, see the installer and user reference guide.

2.2 ADDITIONAL INFORMATION ABOUT SAFETY

DANGER

- *Do not pour water into the indoor or outdoor unit. These products are equipped with electrical parts. If water contacts with electrical components then it will cause a serious electrical shock.*
- *Do not touch or adjust safety devices inside the indoor or outdoor units. If these devices are touched or adjusted, it may cause a serious accident.*
- *Do not open the service cover or access the indoor or outdoor units without disconnecting the main power supply.*
- *In case of fire Turn OFF the main switch, put out the fire at once and contact your service contractor.*

CAUTION

- *Do not use any sprays such as insecticide, lacquer, hair spray or other flammable gases within approximately one (1) meter from the system.*
- *If circuit breaker or fuse is often activated, stop the system and contact your service contractor.*
- *Do not make service or inspections tasks by yourself. This works must be performed by qualified service person.*
- *Do not put any strange material (sticks, etc...) into the air inlet and outlet. These units have high speed rotating fans and it is dangerous that any object touches them.*
- *Refrigerant leakage can cause difficulty with breathing due to insufficient air.*
- *This appliance must be used only by adult and capable people, having received the technical information or instructions to handle properly and safely this appliance.*
- *Children should be supervised to ensure that they do not play with the appliance.*

NOTE

It is recommended to ventilate the room every 3 or 4 hours.

3 IMPORTANT NOTICE

- The supplementary information about the purchased products is supplied in a CD-ROM, which can be found bundled with the indoor unit. In case that the CD-ROM is missing or it is not readable, please contact your HITACHI dealer or distributor.
- **PLEASE READ THE MANUAL AND THE FILES ON THE CD-ROM CAREFULLY BEFORE STARTING WORK ON THE INSTALLATION OF THE SYSTEM.** Failure to observe the instructions for installation, use and operation described in this documentation may result in operating failure including potentially serious faults, or even the destruction of the system.
- Verify, in accordance with the manuals which appear in the outdoor and indoor units, that all the information required for the correct installation of the system is included. If this is not the case, contact your distributor.
- HITACHI pursues a policy of continuing improvement in design and performance of products. The right is therefore reserved to vary specifications without notice.
- HITACHI cannot anticipate every possible circumstance that might involve a potential hazard.

- This outdoor unit has not been designed for industrial processes, and its use as heat pump is limited to the scope of application of the YUTAKI Series. For use in other applications, please contact your HITACHI dealer or service contractor.
- No part of this manual may be reproduced without written permission.
- If you have any questions, contact your service contractor of HITACHI.
- This manual should be considered as a permanent part of the heat pump system. This manual gives a common description and information for this heat pump which you operate as well as for other models.
- Check and make sure that the explanations of each part of this manual correspond to your heat pump model.
- Refer to the models codification to confirm the main characteristics of your system.
- Signal words (NOTE, DANGER and CAUTION) are used to identify levels of hazard seriousness. Definitions for identifying hazard levels are provided below with their respective signal words.
- This outdoor unit is exclusively to use for air to water systems. It can not be used with indoor units in air to air systems.

DANGER

Pressure Vessel and Safety Device: *This heat pump is equipped with a high pressure vessel under PED (Pressure Equipment Directive). The pressure vessel has been designed and tested before shipment according to PED. Also, in order to prevent the system from an abnormal pressure, a high pressure switch, which needs no field adjustment, is utilized in the refrigeration system. Therefore, this heat pump is protected from abnormal pressures. However, if abnormally high pressure is applied to the refrigeration cycle including the high pressure vessel(s), it will result in serious injury or death due to explosion of the pressure vessel. Do not apply a pressure higher than the following pressure to the system, by modifying or changing the high pressure switch.*

CAUTION

This unit is designed for commercial and light industrial application. If installed in house hold appliance, it could cause electromagnetic interference.

DANGER



Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

- *The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).*
- *Do not pierce or burn.*
- *Be aware that refrigerants may not contain an odour.*

Start-up and Operation: Check to ensure that all the stop valves are fully opened and no obstacle exists at the inlet/outlet sides before start-up and during the operation.


Maintenance: Periodically check the high pressure side pressure. If the pressure is higher than the maximum allowable pressure, stop the system and clean the heat exchanger or remove the cause.

Maximum allowable pressure and high pressure cut-out value:


Refrigerant	Maximum allowable pressure (MPa)	High pressure switch cut-out value (MPa)
R32	4.15	4.00 ~ 4.10

i NOTE

The label for the vessel under PED are attached on the high pressure vessel. The pressure vessel capacity and vessel category are indicated on the vessel.

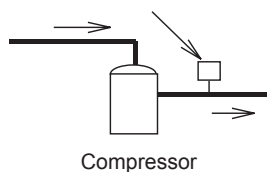Location of high pressure switch**i NOTE**

The high pressure switch is indicated on the electrical wiring diagram in the outdoor unit as HPS connected to printed circuit board (PCB1) in the outdoor unit.

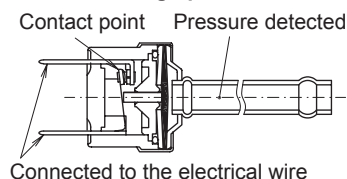Structure of high pressure switch**! DANGER**

- Do not change the high-pressure switch locally or change the high pressure cut-out set value locally. If changed, it will cause serious injury or death due to explosion.
- Do not attempt to turn service valve rod beyond its stop.

4 TRANSPORTATION AND HANDLING


When hanging the unit, ensure a balance of the unit, check safety and lift it up smoothly

Do not remove any packing materials.

Hang the unit under packing condition with two ropes.

For safety reasons ensure that the outdoor unit is lifted smoothly and does not lean

Model	Gross weight (kg)
RASM-2VRE	90
RASM-3VRE	92

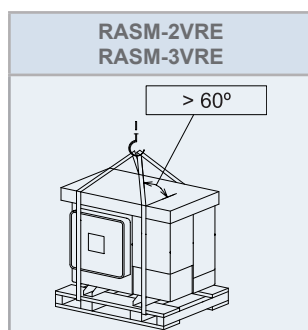**5 BEFORE OPERATION****! CAUTION**

- Supply electrical power to the system for approximately 12 hours before start-up or a long shut-off. Do not start the system immediately after power supply, it may cause a compressor failure because the compressor is not heated well.
- When the system is started after a shut-off longer than approximately 3 months, it is recommended to check the system by your service contractor.
- Turn OFF the main switch when the system is to be stopped for a long period of time: If the main switch is not turned OFF, electricity will be used, because the oil heater is always energised during compressor stopping.
- Make sure that the outdoor unit is not covered with snow or ice. If covered, remove it by using hot water (approximately 50°C). If the water temperature is higher than 50°C, it will cause damage to plastic parts.

5.1 FACTORY-SUPPLIED UNIT COMPONENTS



Accessory	Image	Qty.	Purpose
Gasket		4	Two gaskets for each space heating connections (inlet/outlet)
CD-ROM		1	With the detailed Installation and operation manual
Instruction manual		1	Basic instructions for the installation of the device.
Instruction manual		1	Additional safety manual for R32 refrigerant air conditioner and heat pump according to IEC 60335-2-40:2018
Declaration of conformity	-	1	-

i NOTE

- The previous accessories are supplied inside the unit.
- If some of these accessories are not packed with the unit or any damage to the unit is detected, please contact your dealer.


6 GENERAL DIMENSIONS

6.1 SERVICE SPACE

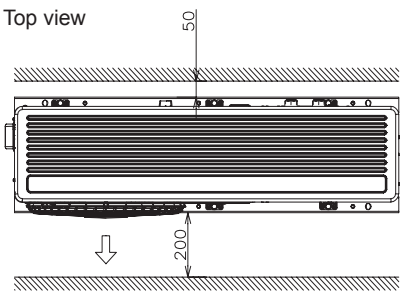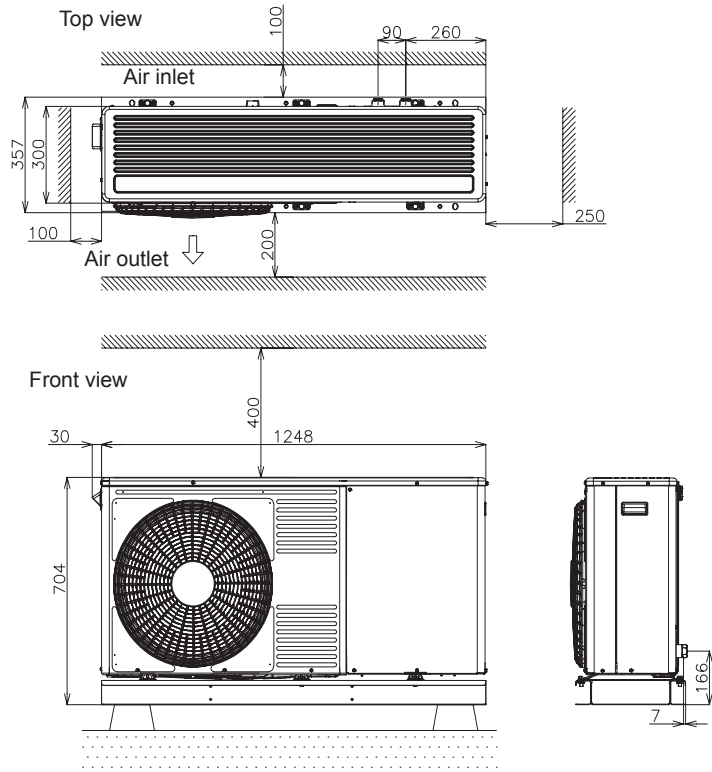

Units in mm.

6.2 NAME OF PARTS AND DIMENSIONAL DATA

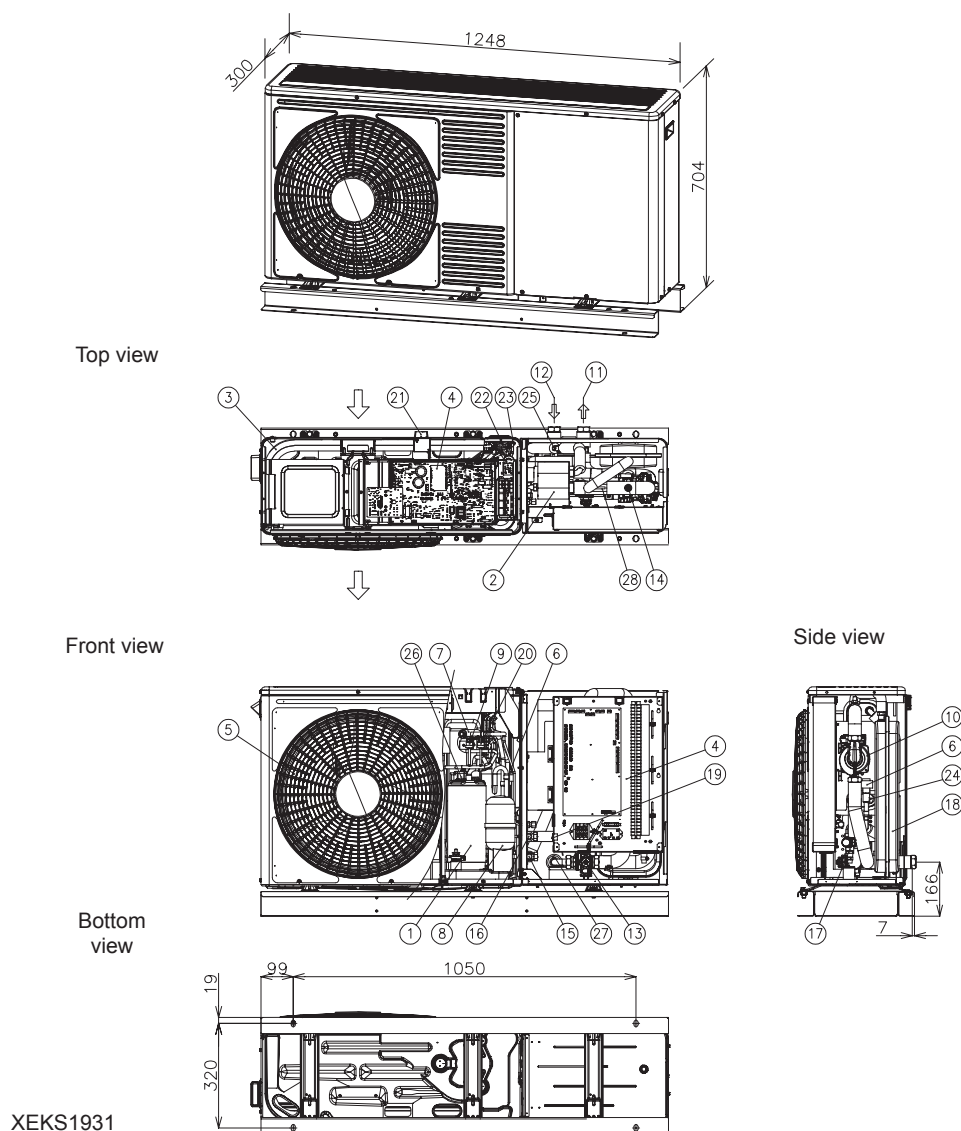

N°	Part name	N°	Part name
1	Compressor	15	Stop valve for gas line - Ø15.88 (5/8")
2	Water side heat exchanger	16	Stop valve for liquid line - 2HP: Ø6,35(1/4") - 3HP: Ø9.52 (3/8")
3	Air side heat exchanger	17	Safety valve
4	Electrical box	18	Expansion vessel 6L
5	Fan (x1)	19	Switch for DHW "emergency" operation
6	Expansion valve (x2)	20	Pressure switch for control (Psc)
7	Reversing valve	21	Ambient thermistor
8	Accumulator	22	Liquid temperature thermistor
9	High pressure switch (HPS)	23	Liquid temperature thermistor
10	Water pump	24	Refrigerant liquid pipe thermistor
11	Water outlet - G 1"	25	Refrigerant gas pipe thermistor
12	Water inlet - G 1"	26	Compressor discharge thermistor
13	Water strainer	27	Water inlet thermistor
14	Air Purger	28	Water outlet thermistor



7 UNIT INSTALLATION

⚠ CAUTION

- Transport the products as close to the installation location as possible before unpacking.
- Do not put any material on the products.

⚠ DANGER


- Install the unit with sufficient clearance around it for operation and maintenance as shown in the next figures. Install the unit where good ventilation is available
- Do not install the unit where there is a high level of oil mist, salty air or sulphurous atmosphere.
- Install the unit as far as practical (being at least 3 meters) from electromagnetic wave radiator (such as medical equipment).
- For cleaning, use nonflammable and nontoxic cleaning liquid. Use of inflammable agent should cause explosion or fire.
- Work with sufficient ventilation, for working in an enclosed space should cause oxygen deficiency. Toxic gas should be produced when cleaning agent is heated to high temperature by, e.g., being exposed to fire.
- Install the unit in a location where noise emitted by the unit does not disturb neighbours.
- Cleaning liquid shall be collected after cleaning.
- Pay attention not to clamp cables when attaching the service cover to avoid electric shock or fire.

⚠ CAUTION

- When installing more than one units together, keep clearance between the units of more than 500 mm, and avoid obstacles that should hamper air intake.
- Install the unit in the shade or not exposed to direct sunshine or direct radiation from high temperature heat source.
- Do not install the unit in a space where a seasonal wind directly blows to the Outdoor fan.
- Make sure that the foundation is flat, level and sufficiently strong.
- This unit has aluminium fins with sharp edges. Pay attention to the fins to avoid injury. Install the unit in a restricted area not accessible by the general public

7.1 INSTALLATION SPACE

(Units in mm)

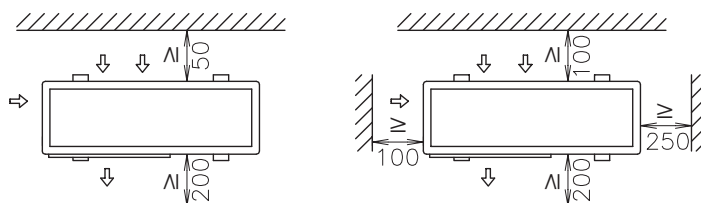




a) In case of front side and either of the sides are open (single unit)		b) In case that surrounding wall exist (single unit)	
c) In case that upper side obstacles exist (single unit)			

d) In case that upper side obstacles exist (serial units) $0 < L \leq 1/2 H \rightarrow A \geq 500$ $1/2 H < L \leq H \rightarrow A \geq 1000$	e) In case of front side and either of the sides are open (serial units)	
f) In case that surrounding wall exist (serial units)		
$0 < L \leq 1/2 H \rightarrow A \geq 500$ $1/2 H < L \leq H \rightarrow A \geq 1000$	$0 < L \leq 1/2 H \rightarrow A \geq 200$ $1/2 H < L \leq H \rightarrow A \geq 350$	
g) Horizontal (multiple units) $0 < L \leq 1/2 H \rightarrow A \geq 100$ $1/2 H < L \leq H \rightarrow A \geq 200$	h) Vertical (multiple units)	
Do not stack more than two units in height. - Close gap (*) to avoid recirculating discharge air flow.		

7.2 PLACE PROVISION

◆ Concrete foundation


- Foundation shall be on a level surface and it is recommended to be 100-300 mm higher than ground level.
- Use M10 anchor bolts to fix the unit to the foundation. (Foundation bolts, nuts and washers are not included, and must be field supplied).
- Drain water might turn into ice on cold weather areas. Therefore, when installing the unit on a roof or a veranda, avoid the draining on a public area since it may become slippery.

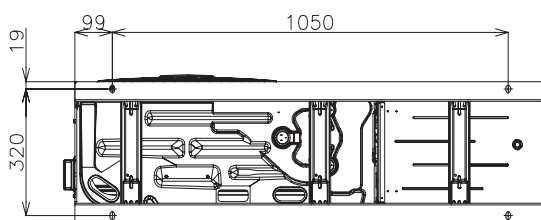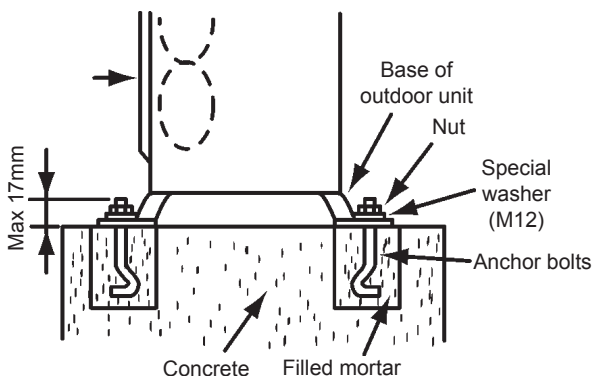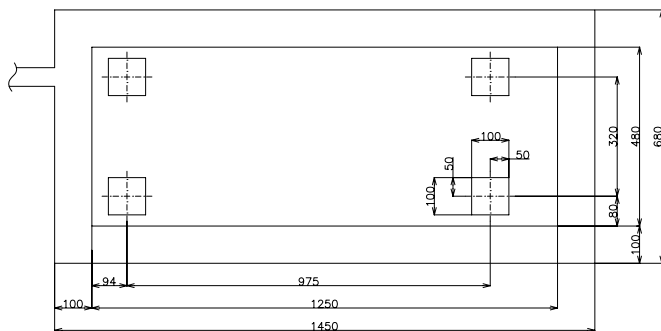

- The unit is low-vibration model, but consider using some floor reinforcement or anti-vibration mat/rubber when vibration should occur due to weakness of attached surface.
- The foundation shall be unified with the floor slab. If not, calculate the vibration proof of the installation of YUTAKI M unit with the foundation in order to ensure strength against a fall or for when the unit has to be moved.
- Drain water and rainwater are discharged from the bottom of the unit when in operation as well as when stopped.
- Choose a location with good drainage or place a water drain as in the drawing.
- Make the foundation flat and waterproof, as a water pool may appear in case of, for instance, rain.
- This is a low-profile product with a shallow depth. It may also

be able to fix on the wall as shown below when fixing only with the foundation bolt does not seem sufficiently stable depending on the conditions of the installation. (Metal fittings must be field supplied).

◆ Fix unit to the wall

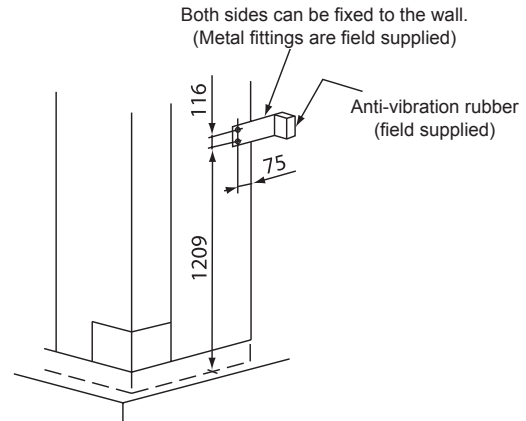

- Fix the unit onto the wall as indicated in the figure. (Stay field supplied)
- The foundation shall be strong enough to avoid any deformation and vibration.
- In order to prevent vibration transfer to the building, place rubber material between the stay and the wall.

⚠ CAUTION

Pay attention to the following for installation:

- Installation shall ensure that unit will not incline, vibrate, make noise or fall down by a blast of wind or in an earthquake. Calculate quake-resistance strength to ensure that installation is strong enough against falling. Fix the unit with wires (field supplied) when installing in a location without walls or windbreak and likely exposed to a blast of wind.
- Apply vibration-proof material where necessary.


◆ Installing location where the unit will be exposed to strong wind

Follow the instructions below to install on the rooftop or a location without surrounding buildings, where strong wind is expected against the product.

Choose a location where the outlet or inlet side of the product will not be exposed to strong wind.

When the outlet is exposed to strong wind:


Direct strong wind may cause lack of air flow and adversely affect to the operation.

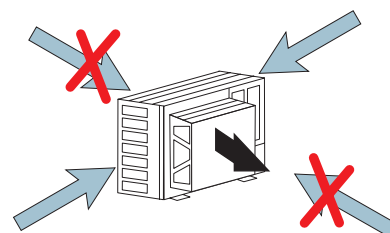

⚠ CAUTION

Excessive strong wind against the outdoor unit outlet may cause inverse rotation and damage the fan and motor.

In case of blowing strong wind to air outlet the wind guard (optional) is available to avoid strong wind.

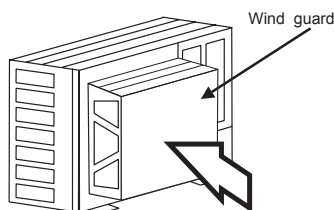

Wind guard model

Model	Number of set required
WSP-264	1

8 REFRIGERANT AND WATER PIPING

8.1 GENERAL NOTES BEFORE PERFORMING PIPING WORK

- Prepare locally-supplied copper pipes.
- Select the piping size with the correct thickness and correct material able to withstand sufficient pressure.
- Select clean copper pipes. Make sure that there is no dust or moisture inside the pipes. Blow the inside of the pipes with oxygen free nitrogen to remove any dust and foreign materials before connecting them.

NOTE

A system with no moisture or oil contamination will give maximum performance and lifecycle compared to that of a poorly prepared system. Take particular care to ensure that all copper piping is clean and dry internally.

- Cap the end of the pipe when pipe is to be inserted through a wall hole.
- Do not put pipes on the ground directly without a cap or vinyl tape at the end of the pipe.



- If piping installation is not completed until next day or over a longer period of time, braze off the ends of the piping and charge with oxygen free nitrogen through a Schrader valve type access fitting to prevent moisture and particle contamination.
- It is advisable to insulate the water pipes, joints and connections in order to avoid heat loss and dew condensation on the surface of the pipes or accidental injuries due to excessive heat on piping surfaces.
- Do not use insulation material that contains NH_3 , as it can damage copper pipe material and become a source of future leakage.
- It is recommended to use flexible joints for the water piping inlet and outlet in order to avoid vibration transmission.
- Water circuit must be performed and inspected by a licensed technician and must comply with all relevant European and

national regulations.

- Proper water pipe inspection should be performed after piping work to assure there is no water leakage in the space heating circuit.

8.2 REFRIGERANT CIRCUIT

8.2.1 Refrigerant charge

The R32 refrigerant is factory charged in the outdoor unit.

8.2.2 Precautions in the event of gas refrigerant leaks

The installers and those responsible for drafting the specifications are obliged to comply with local safety codes and regulations in the case of refrigerant leakage.

CAUTION

- Do not charge OXYGEN, ACETYLENE, or other flammable and poisonous gases into the refrigerant because an explosion can occur. It is recommended that oxygen free nitrogen be charged for these types of tests cycle when performing a leakage test or an airtight test. These types of gases are extremely dangerous.
- Insulate the unions and flare-nuts at the piping connection part completely.
- Insulate the liquid piping completely to avoid a decrease of performance; if not, it will cause sweating on the surface of the pipe.
- Charge refrigerant correctly. Overcharging or insufficient charging could cause a compressor failure.
- Check for refrigerant leakage in detail. If a large refrigerant leakage occurred, it would cause difficulty with breathing or harmful gases would occur if a fire were being used in the room.
- If the flare nut is tightened too hard, the flare nut may crack after a long time and cause refrigerant leakage.

9 DRAIN PIPING

9.1 WATER DRAIN DISCHARGE CONNECTION (ACCESSORY)

When the base of the outdoor unit is temporarily utilized as a drain receiver and the drain water in it is discharged, this drain boss is utilized to connect the drain piping.


Model	DBS-12L
-------	---------

Connecting procedure


- 1 Insert the plastic cap into the drain boss up to the extruded portions.
- 2 Insert the boss into the unit base up to the extruded portions.
- 3 Size of the drain boss is $\varnothing 15$ mm (O.D.)
- 4 A drain pipe should be field-supplied.

i NOTE

- Do not use this drain boss set in a cold area, because the drain water may freeze.
- This drain boss is not sufficient to collect all the drain water. If collecting drain water is completely required, provide a drain-pan that is bigger than the unit base and install it under the unit with drainage.

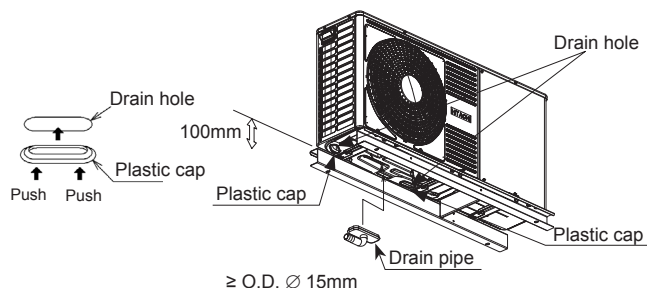

9.2.2 Additional hydraulic necessary elements for DHW

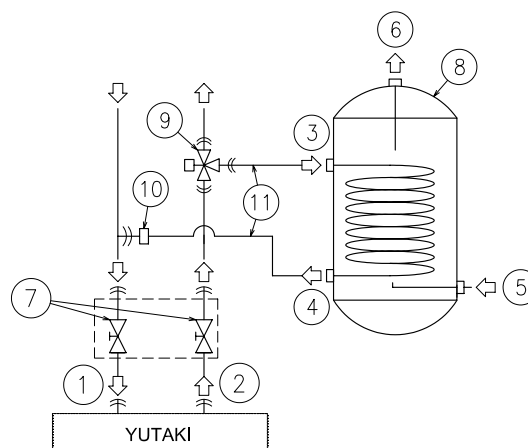


9.2 SPACE HEATING AND DHW

⚠ DANGER

Do not connect the power supply to the unit prior to filling the space heating circuit (and DHW circuit if it were the case) with water and checking water pressure and the total absence of any water leakage.

9.2.1 Additional hydraulic necessary elements for space heating

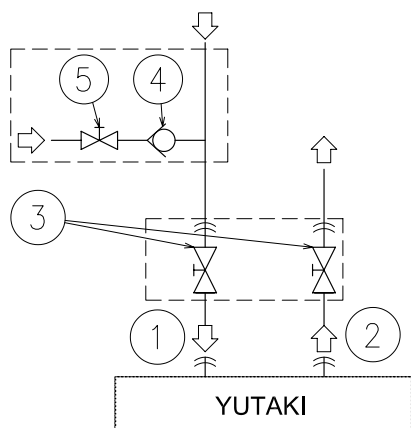

Nature	N°	Part name
Piping connections	1	Water inlet (Space heating)
	2	Water outlet (Space heating)
Field supplied	3	Shut-off valve (field supplied)
Accessories	4	Water check valve (ATW-WCV-01 accessory)
Field supplied	5	Shut-off valve

The following hydraulic elements are necessary to correctly perform the space heating water circuit:


- Two shut-off valves (field supplied accessory) (3)** must be installed in the unit. One at the water inlet connection (1) and the other at the water outlet connection (2) in order to make easier any maintenance work.
- A water check valve (ATW-WCV-01 accessory) (5)** with 1 shut-off valve (field supplied) (4) must be connected to the water filling point when filling the unit. The check valve acts as a safety device to protect the installation against back pressure, back flow and back syphon of non-potable water into drinking water supply net.

Nature	N°	Part name
Piping connections	1	Water inlet (Space heating)
	2	Water outlet (Space heating)
	3	Heating coil inlet
	4	Heating coil outlet
	5	Water inlet (DHW)
	6	Water outlet (DHW)
Field supplied	7	Shut-off valve (field supplied)
Accessories	8	Domestic hot water tank (DHWT-(200/300)S-3.0H2E accessory)
	9	3-way valve (ATW-3WV-01 accessory)
Field supplied	10	T-branch
	11	Heating coil pipes

YUTAKI M is not factory-supplied ready for DHW operation, but it can be used for the production of DHW if the following elements are installed:

- A domestic hot water tank (DHWT-(200/260)S-3.0H2E accessory) (8)** has to be installed in combination with the unit.
- A 3-way valve (ATW-3WV-01 accessory) (9)** must be connected at one point of the water outlet pipe of the installation.
- A T-branch (field supplied) (10)** must be connected at one point of the water inlet pipe of the installation.
- Two water pipes (field supplied) (11).** One pipe between 3-way valve and the heating coil inlet (3) of the DHW tank, the other one between the T-branch and the heating coil outlet (4) of the DHW tank.

Additionally, the following elements are required for the DHW circuit:

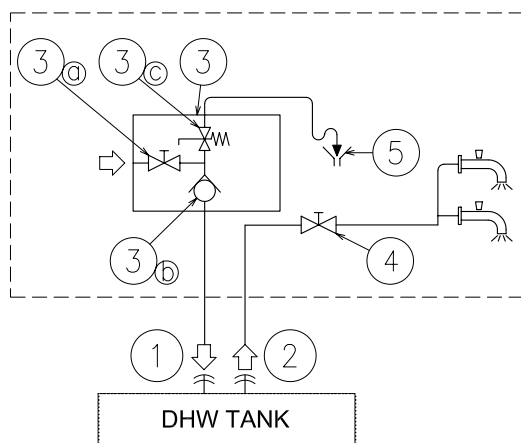

Nature	N°	Part name
Piping connections	1	Water inlet (DHW)
	2	Water outlet (DHW)
Field supplied	3	Pressure and temperature relief valve
	3a	Shut-off valve
	3b	Water check valve
	3c	Pressure relief valve
	4	Shut-off valve
	5	Draining


- **1 Shut-off valve (field supplied):** one shut-off valve (4) must be connected after the DHW outlet connection of the DHW tank (2) in order to make easier any maintenance work.
- **A Security water valve (Field-supplied):** this accessory (3) is a pressure and temperature relief valve that must be installed as near as possible to the DHW inlet connection of the DHW tank (1). It should ensure a correct draining (5) for the discharge valve of this valve. This security water valve should provide the following:
 - Pressure protection
 - Non-return function
 - Shut-off valve
 - Filling
 - Draining

NOTE

The discharge pipe should always be open to the atmosphere, free of frost and in continuous slope to the down side in case that water leakage exists.

9.2.3 Additional hydraulic optional elements (For DHW)

In case of a recirculation circuit for the DHW circuit:

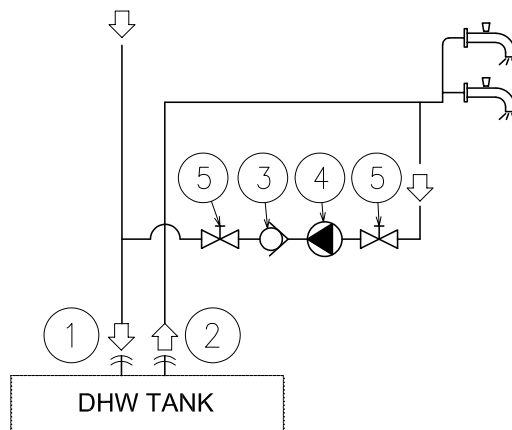

Nature	N°	Part name
Piping connections	1	Water inlet (DHW)
	2	Water outlet (DHW)
Accessories	3	Water check valve (ATW-WCV-01 accessory)
Field supplied	4	Water pump
	5	Shut-down valve

- **1 Recirculation water pump (field supplied):** this water pump (3) will help to correctly recirculate the hot water to the DHW inlet.
- **1 Water check valve (ATW-WCV-01 accessory):** this HITACHI accessory (3) is connected after the recirculation water pump (4) in order to ensure the non-return of water.
- **2 Shut-down valves (field supplied) (5):** one before the recirculation water pump (4) and other after the water check valve accessory (3).

9.2.4 Requirements and recommendations for the hydraulic circuit

- The maximum piping length depends on the maximum pressure availability in the water outlet pipe. Please check the pump curves.
- The unit is equipped with a manual air purger (factory supplied) at the highest location of the unit. If this location is not the highest of the water installation, air might be trapped inside the water pipes, which could cause system malfunction. In that case additional air purgers (field supplied) should be installed to ensure no air enters the water circuit.
- For heating floor system, the air should be purged by means of an external pump and an open circuit to avoid air bags.
- When the unit is stopped during shut-off periods and the ambient temperature is very low, the water inside the pipes and the circulating pump may freeze, thus damaging the pipes and the water pump. In these cases, the installer shall ensure that the water temperature inside the pipes does not fall below the freezing point. In order to prevent this, the unit has a self-protection mechanism which should be activated (refer to the Service manual, "Optional functions" chapter).

- Additionally, in cases where water drainage is difficult, an anti freeze mixture of glycol (ethylene or propylene) should be used (content between 10% to 40%). The performance of the unit working with glycol may decrease in proportion to the percentage of glycol used, since the density of glycol is higher than that of the water.
- Check that the water pump of the space heating circuit works within the pump operating range and that the water flow is over the pump's minimum. If the water flow is below 6 litres/minute, alarm is displayed on the unit.
- An additional special water filter is highly recommended to be installed on the space heating (field installation), in order to remove possible particles remaining from brazing which cannot be removed by the unit water strainer.
- When selecting a tank for DHW operation, take into consideration the following points:
 - The storage capacity of the tank has to meet with the daily consumption in order to avoid stagnation of water.
 - Fresh water must circulate inside the DHW tank water circuit at least one time per day during the first days after the installation has been performed. Additionally, flush the system with fresh water when there is no consumption of DHW during long periods of time.
 - Try to avoid long runs of water piping between the tank and the DHW installation in order to decrease possible temperature losses.
 - If the domestic cold water entry pressure is higher than the equipment's design pressure (6 bar), a pressure reducer must be fitted with a nominal value of 7 bar.
- When necessary, put insulation on the pipes in order to avoid heat losses.
- Whenever possible, sluice valves should be installed for water piping, in order to minimize flow resistance and to maintain sufficient water flow.
- Ensure that the installation complies with applicable legislation in terms of piping connection and materials, hygienic measures, testing and the possible required use of some specific components like thermostatic mixing valves, Differential pressure overflow valve, etc.
- The maximum water pressure is 3 bar (nominal opening pressure of the safety valve). Provide adequate reduction pressure device in the water circuit to ensure that the maximum pressure is NOT exceeded.
- Ensure that the safety valve and the air purger are properly driven or oriented to avoid water being in contact with unit components.
- Make sure that all field supplied components installed in the piping circuit can withstand the water pressure and the water temperature range in which the unit can operate.
- YUTAKI units are conceived for exclusive use in a closed water circuit.
- The internal air pressure of the expansion vessel tank will be adapted to the water volume of the final installation (factory supplied with 0.1 MPa of internal air pressure).
- Do not add any type of glycol to the water circuit.
- Drain taps must be provided at all low points of the installation to permit complete drainage of the circuit during servicing.


9.2.5 Water filling

- 1 Check that a water check valve (ATW-WCV-01 accessory) with a shut-off valve (field supplied) is connected to the water filling point (water inlet connection) for filling the space heating hydraulic circuit (see "9.2 Space heating and DHW").
- 2 Make sure all the valves are open (water inlet/outlet shut-off valves and the rest of valves of the space heating installation components).
- 3 Ensure that the air purgers of the unit and installation work correctly.
- 4 Connect a drain pipe to the safety valve and make sure that it is correctly connected to the general draining system. The safety valve is later used as an air purging device during the water filling procedure.
- 5 Fill the space heating circuit with water until the pressure displayed on the manometer reaches approximately 1.8 bar.

i NOTE

While the system is being filled with water, it is highly recommended to operate the safety valve manually so as to help with the air purging procedure.

- 6 Remove as much air from inside the water circuit as possible through the air purger and other air vents in the installation (fan coils, radiators...).
- 7 Start the air purge procedure test. There are two modes (Manual or Automatic) which helps in case of installations with heating and DHW operation:
 - a. Manual: Start and stop the unit manually using the unit controller (Run/Stop button) and also using the DSW4 pin 2 of the PCB1 (ON: Forced to derive to DHW coil; OFF: Forced to derive to space heating).
 - b. Automatic: Select the air purge function using the user controller. When the automatic air purge function is running, the pump speed and the position of the 3-way valve (space heating or DHW) are automatically changed:

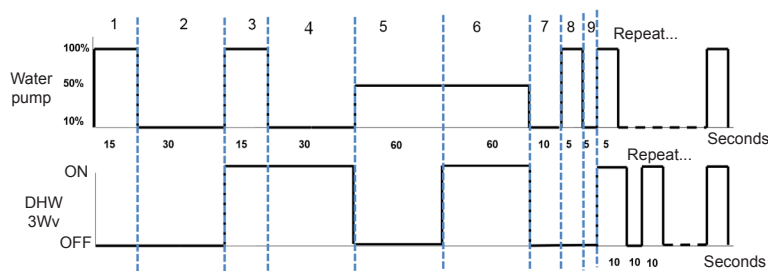

- 8 If a little quantity of air is still remaining in the water circuit, it should be removed by the manual air purger of the unit during the first hours of operation. Once the air in the installation has been removed, a reduction of water pressure in the circuit is very likely to occur. Therefore, additional water should be filled until water pressure returns to an approximate level of 1.8 bar.

i NOTE

- The unit is equipped with a manual air purger (factory supplied) at the highest location of the unit. Anyway, if there are higher points in the water installation, air might be trapped inside water pipes, which could cause system malfunction. In that case, additional air purgers (field supplied) should be installed to ensure no air enters into the water circuit. The air vents should be located at points which are easily accessible for servicing.
- The water pressure indicated on the manometer may vary depending on the water temperature (the higher temperature, the higher pressure). Nevertheless, it must remain above 1 bar in order to prevent air from entering the circuit.
- Fill in the circuit with tap water. The water in the heating installation must comply with EN directive 98/83 EC. Non-sanitary controlled water is not recommended (for example, water from wells, rivers, lakes, etc.) (See "Water quality" section at the CD-ROM).
- The maximum water pressure is 3 bar (nominal opening pressure of the safety valve). Provide adequate reduction pressure device in the water circuit to ensure that the maximum pressure is NOT exceeded.
- For heating floor system, air should be purged by means of an external pump and an open circuit to prevent the formation of air pockets.
- Check carefully for leaks in the water circuit, connections and circuit elements.

9.3 MINIMUM WATER VOLUME DESCRIPTION

The following part shows how to calculate the minimum water volume in the system for product protection (anti-hunting) and temperature drop at defrosting.

1 Protective water volume for product

Ensure that the water volume is equal or greater than those shown below, in order to lower ON/OFF frequency of YUTAKI M unit at no load or extreme light load. When water volume is less than the volume indicated (minimum water volume), compressor operation frequently stops at light load, which should result in shorter life or failure.

i NOTE

The factory default ON/OFF temperature differential is "4 °C". Note that the minimum water volume varies for different setting for each purpose as shown in the next table:

(Units: ltrs.)

ON/OFF Temperature differential	Model	
	RASM-2VRE	RASM-3VRE
4°C	28	28
3°C	36	36
2°C	50	50
1°C	80	80

2 Minimum required water volume during defrosting

- The following formula is used to make the calculation:

Where:
$$V = \frac{360 \times Q_{DEF}}{\Delta T \times 4168.8}; Q_{DEF} = Q_i + Q_y$$

V = Required water volume (m³)

The minimum volume of water needed in the installation to cover the heat loss caused by a reduction in the delivery water temperature during defrosting.

ΔT = Permissible water temperature drop (°C)

Drop in the delivery water temperature that the client is willing to allow in the installation.

Q_{DEF} = Heat loss during defrosting (kW)

Heat loss caused in the system by reducing the delivery water temperature, which may affect the user's comfort level of warmth. This value is the sum of the two following items:

Q_i = Heat demand from the installation (kW)

While defrosting is taking place, the unit is not providing the heat required to cover the heat demand from the installation. This value can be obtained in 2 ways:

- By using the value of the energy demand from the installation, if known.
- If this value is not known, it can be estimated by using the heating capacity of the unit at an air temperature of 0°C WB and a delivery water temperature at, for example, 45°C.

Q_y = Cooling load on the YUTAKI M unit (kW)

In addition to not providing the heat required to cover the heat demanded by the installation during defrosting, the unit is also producing cold. It can be estimated that this value is approximately 85% of the heating capacity on the unit under standard conditions (air temperature: 6/7°C (WB/DB) and input/output temperature of the water: 40 / 45°C)

i NOTE

The maximum time for defrosting considered is 6 minutes per hour.

The following table shows the minimum water volume needed in each YUTAKI M unit in case of a permitted drop in temperature of 10°C.

(Unit: ltrs.)

Water temperature drop	Model	
	RASM-2VRE	RASM-3VRE
5°C	212	212
10°C	106	106
15°C	71	71
20°C	53	53
25°C	42	42

i NOTE

- The values shown on the table are based on theoretical installation conditions. In addition, YUTAKI M unit admits several hydraulic circuits configurations, and the value can be different depending on each specific installation.
- Therefore, it rests with the client to recalculate these values depending on the real conditions of the installation.

9.4 WATER CONTROL

It is necessary to analyse the quality of water by checking pH, electrical conductivity, ammonia ion content, sulphur content, and others. The following is the recommended standard water quality.

Item	Chilled water system		Tendency ⁽¹⁾	
	Circulating water (20°C less than)	Supply water	Corrosion	Deposits of scales
Standard Quality pH (25 °C)	6.8 ~ 8.0	6.8 ~ 8.0	●	●
Electrical Conductivity (mS/m) (25 °C) {μS/cm} (25 °C) ⁽²⁾	Less than 40 Less than 400	Less than 30 Less than 300	●	●
Chlorine Ion (mg Cl ⁻ /l)	Less than 50	Less than 50	●	
Sulphur Acid Ion (mg H ₂ SO ₄ /l)	Less than 50	Less than 50	●	
The amount of Acid consumption (pH 4.8) (mg CaCO ₃ /l)	Less than 50	Less than 50		●
Total Hardness (mg CaCO ₃ /l)	Less than 70	Less than 70		●
Calcium Hardness (mg CaCO ₃ /l)	Less than 50	Less than 50		●
Silica L (mg SiO ₂ /l)	Less than 30	Less than 30		●
Reference Quality Total Iron (mg Fe/l)	Less than 1.0	Less than 0.3	●	●
Total Copper (mg Cu/l)	Less than 1.0	Less than 0.1	●	
Sulphur Ion (mg S ²⁻ /l)	It shall not be detected		●	
Ammonium Ion (mg NH ₄ ⁺ /l)	Less than 1.0	Less than 0.1	●	
Remaining Chlorine (mg Cl/l)	Less than 0.3	Less than 0.3	●	
Floating Carbonic Acid (mg CO ₂ /l)	Less than 4.0	Less than 4.0	●	
Index of Stability	6.8 ~ 8.0	-	●	●


i NOTE

- (1) The mark "●" in the table means the factor concerned with the tendency of corrosion or deposits of scales.
- (2) The value showed in "{" are for reference only according to the former unit.

9.5 WATER PIPING CONNECTION

◆ Piping location and connection size

The unit is factory supplied with two unions to be connected to the water inlet/outlet pipe. Refer to the next figure detailing the location of the water pipes location, dimensions and connection sizes.

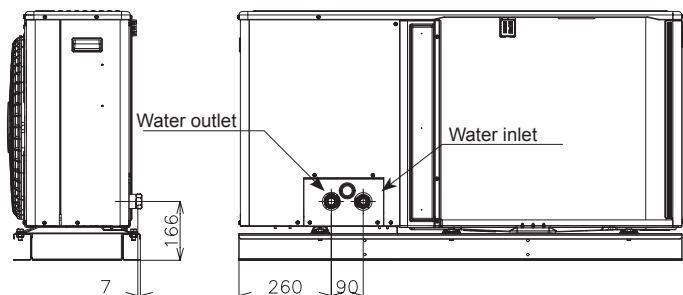

Description	Connection size
Water Inlet	Rp1"
Water Outlet	Rp1"


9.6 SUSPENSION OF WATER PIPING

Suspend the water piping at certain points and prevent the water piping from being in direct contact with the building: walls, ceilings, etc...

If there is direct contact between pipes, abnormal sound may occur due to the vibration of the piping. Pay special attention in cases of short piping lengths.

Do not fix the water pipes directly with the metal fittings (piping may expand and contract).

Some examples for suspension method are shown below.

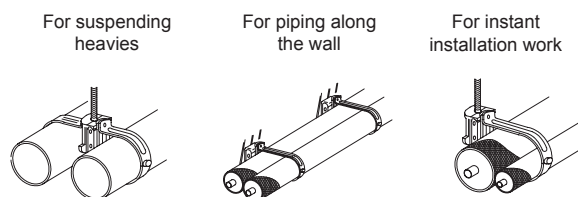

10 ELECTRICAL AND CONTROL SETTINGS

10.1 GENERAL CHECK

- Make sure that the following conditions related to power supply installation are satisfied:
 - The power capacity of the electrical installation is large enough to support the power demand of the YUTAKI system (outdoor unit + DHW tank (if apply)).
 - The power supply voltage is within ±10% of the rated voltage.
 - The impedance of the power supply line is low enough to avoid any voltage drop of more than 15% of the rated voltage.

- Following the Council Directive 2004/108/EC, relating to electromagnetic compatibility, the table below indicates the Maximum permitted system impedance $Z_{\max}$ at the interface point of the user's supply, in accordance with EN61000-3-11.

Model	Power supply	Operation mode	$Z_{\max}$ (Ω)
RASM-2VRE	1~ 230V 50Hz	-	-
		With DHW tank heater	0.30
RASM-3VRE		-	0.43
		With DHW tank heater	0.24

i NOTE

The data corresponding to DHW tank heater is calculated in combination with the domestic hot water tank accessory "DHWT-(200/300)S-3.0H2E".


- The status of Harmonics for each model, regarding compliance with IEC 61000-3-2 and IEC 61000-3-12, is as follows:

Status regarding compliance with IEC 61000-3-2 and IEC 61000-3-12	Models
Equipment complying with IEC 61000-3-2 (Professional use)	RASM-2VRE RASM-3VRE
Equipment complying with IEC 61000-3-12	-
Installation restrictions may be applied by supply authorities in relation to harmonics	-

- Check to ensure that existing installation (mains power switches, circuit breakers, wires, connectors and wire terminals) already complies with the national and local regulations.
- The use of the DHW tank heater is disabled as factory setting. If it is desired to enable the DHW tank heater operation during normal unit operation, adjust the DSW4 pin 3 of the PCB1 to the ON position and use the adequate protections.

10.2 ELECTRICAL WIRING CONNECTION FOR OUTDOOR UNITS

- The electrical wiring connection for the outdoor unit is shown in figure below

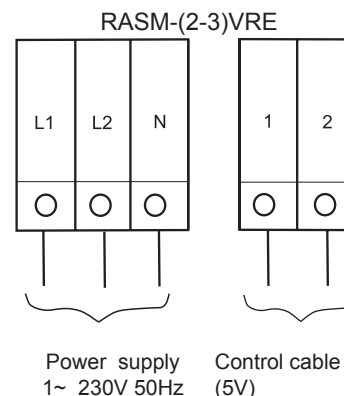

10.2.1 Power and transmission wiring connection

- Safety instructions

i NOTE


Check the requirements and recommendations in the chapter "10 Electrical and control settings".

! DANGER

- Do not connect the power supply to the unit prior to filling the space heating circuit (and DHW circuit if it were the case) with water and checking water pressure and the total absence of any water leakage.
- Do not connect or adjust any wiring or connections unless the main power switch is OFF.
- When using more than one power source, check and ensure that all of them are turned OFF before operating the unit.
- Avoid wiring installation in contact with the refrigerant pipes, water pipes, edges of plates and electrical components inside the unit to prevent damage, which may cause electric shock or short circuit.

! CAUTION

- Use a dedicated power circuit for the unit. Do not use a power circuit shared with the outdoor unit or any other appliance.
- Make sure that all wiring and protection devices are properly selected, connected, identified and fixed to the corresponding terminals of the unit, specially the protection (earth) and power wiring, taking into account the applicable national and local regulations. Establish proper earthing; Incomplete earthing may cause electrical shock.
- Protect the unit against the entry of small animals (like rodents) which could damage the drain pipe and any internal wire or any other electrical part, leading to electric shock or short-circuit.
- Keep a distance between each wiring terminal and attach insulation tape or sleeve as shown in the figure.

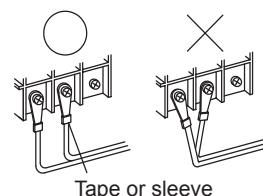

10.3 WIRING SIZE AND MINIMUM REQUIREMENTS OF THE PROTECTION DEVICES

⚠ CAUTION

- Check to ensure that the field supplied electrical components (mains power switches, circuit breakers, wires, connectors and wire terminals) have been properly selected according to the electrical data indicated on this chapter and they comply with national and local codes. If it is necessary, contact with your local authority in regards to standards, rules, regulations, etc.
- Use a dedicated power circuit for the unit. Do not use a power circuit shared with the outdoor unit or any other appliance.

Use wires which are not lighter than the polychloroprene sheathed flexible cord (code designation 60245 IEC 57).

Model	Power supply	Operation mode	Power supply cables	Transmitting cables	CB (A)	ELB (n° of poles/A/mA)
			EN60335-1	EN60335-1		
RASM-2VRE	1~ 230V 50Hz	-	2 x 2.50 mm ² + GND	2 x 0.75 mm ²	16	2/40/30
		With DHW tank heater	2 x 6.0 mm ² + GND		32	
RASM-3VRE		-	2 x 4.0 mm ² + GND		20	2/40/30
		With DHW tank heater	2 x 6.0 mm ² + GND		32	

i NOTE

The data corresponding to DHW tank heater is calculated in combination with the domestic hot water tank accessory "DHWT-(200/300)S-3.0H2E".

⚠ CAUTION


- Ensure specifically that there is an Earth Leakage Breaker (ELB) installed for the units (outdoor unit).
- If the installation is already equipped with an Earth Leakage Breaker (ELB), ensure that its rated current is large enough to hold the current of the units (outdoor unit).

i NOTE

- Electric fuses can be used instead of magnetic Circuit Breakers (CB). In that case, select fuses with similar rated values as the CB.
- The Earth Leakage Breaker (ELB) mentioned on this manual is also commonly known as Residual Current Device (RCD) or Residual Current Circuit Breaker (RCCB).
- The Circuit Breakers (CB) are also known as Thermal-Magnetic Circuit Breakers or just Magnetic Circuit Breakers (MCB).

10.4 OPTIONAL UNIT WIRING (ACCESSORIES)

◆ Summary of the terminal board connections



Mark	Part name	Description
TERMINAL BOARD 1 (TB1)		
N	1~ 230V 50Hz	Main power supply connection
L1		
L2		
L3		
TERMINAL BOARD 2 (TB2)		
1	H-LINK commutation	The H-LINK transmission has to be done between the indoor unit and the terminals 1-2 of either outdoor unit, ATW-RTU or any other central device.
2		
3	H-LINK communication for remote control switch	Terminals for the connection of the YUTAKI unit controller.
4		
5	DHW tank's thermistor	The DHW sensor is used to control the temperature of the domestic hot water tank.
6	Common thermistor	Common terminal for thermistor.
7	Thermistor for water outlet temperature of second cycle	The sensor is used for the second temperature control and should be positioned after the mixing valve and the circulation pump.
8	Thermistor for water outlet temperature after hydraulic separator	Water sensor for hydraulic separator, buffer tank or boiler combination.
9	Common thermistor	Common terminal for thermistors.

Mark	Part name	Description
10	Thermistor for swimming pool water temperature	The sensor is used for the swimming pool temperature control and should be positioned inside plate heat exchanger of the swimming pool.
11	Thermistor for second ambient temperature	The sensor is used for the second ambient temperature control and it should be positioned outdoors.
12	Earth	Earth connection for the 3 way valve and water pump.
13	Common line	Terminal Line common for input 1 and input 2.
14	Input 1 (Demand ON/OFF) (*)	The air to water heat pump system has been designed to allow the connection of a remote thermostat to effectively control your home's temperature. Depending on the room temperature, the thermostat will turn the air to water heat pump system ON and OFF.
15	Input 2 (ECO mode) (*)	Available signal which allows to reduce the water setting temperature of circuit 1, circuit 2 or both.
16	Common line	Terminal Line common for inputs 3, 4, 5, 6, 7.
17	Input 3 (Swimming pool) (*)	Only for swimming pool installations: It is necessary to connect an external input to the air to water heat pump to provide signal when the water pump of swimming pool is ON.
18	Input 4 (Solar) (*)	Available input for Solar combination with Domestic Hot Water Tank.
19	Input 5 (Smart function) (*)	For the connection of an external tariff switch device to switch OFF the heat pump during peak electricity demand period. Depending on the setting, the heat pump or DHWT will be blocked when signal is open/closed.
20	Input 6 (DHW boost) (*)	Available input for an instantaneous heating of the domestic hot water of the tank.
21	Input 7 (Power meter)	The measuring of the real power consumption can be done connecting an external power meter. The number of pulses of the power meter is a variable which must be set. By this, every pulse input is added into corresponding operation mode (Heating, Cooling, DHW Operation). Two possible options: - One power meter for all installation (IU+OU). - Two separated power meters (one for IU and one for OU).
22	Aquastat security for circuit 1 (WP1)	Terminals intended for the connection of the Aquastat security accessory (ATW-AQT-01) for controlling water temperature of the circuit 1.
23		
24(C)	Mixing valve close	When a mixing system is required for a second temperature control, these outputs are necessary to control the mixing valve.
25(O)	Mixing valve open	
26(N)	N Common	
27(L)	Water Pump 2 (WP2)	When there is a second temperature application, a secondary pump is the circulating pump for the secondary heating circuit.
28	Auxiliary power	Power supply for ATW-RTU and central device
29		
30(N)	Electrical Heater DHW Output	If DHW tank contains an electric heater, the air to water heat pump can activate it if the heat pump cannot achieve the required DHW temperature by itself.
31(L)		
32(C)	Common line	Common terminal for the 3-way valve for DHW tank.
33(L)	3-way valve for DHW tank	The air to water heat pump can be used to heat DHW. This output will be on when DHW is activated.
34(N)	N common	Neutral terminal common for 3-way valve of DHW tank and outputs 1 and 2.
35(L)	Output 1 (3-way valve for swimming pool) (*)	The air to water heat pump can be use to heat swimming pool. This output will be ON when swimming pool is activated.
36(L)	Output 2 (Water pump 3 (WP3)) (*)	When there is a hydraulic separator or buffer tank, additional water pump (WP3) is needed.
37	Output 3 (Auxiliary boiler or electric heater) (*)	The boiler can be used to alternate with the heat pump when the heat pump cannot achieve the required temperature by itself.
38		A water electric heater (as accessory) can be used to provide the additional heating required on the coldest days of the year.
39	Output 4 (Solar) (*)	Output for solar combination with Domestic Hot Water Tank.
40		

NOTE


(*): Inputs and outputs explained in the table are the factory-set options. By means of the unit controller, some other inputs and outputs functions can be configured and used. Please, refer to the Service Manual for detailed information.

10.5 SETTING OF DIP SWITCHES AND RSW SWITCHES


10.5.1 Setting of DIP Switches for PCB1

◆ Quantity and Position of DIP Switches

PCB1

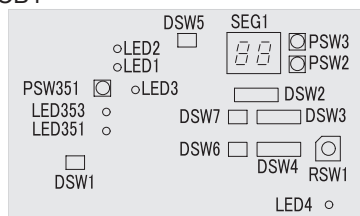

PCB2

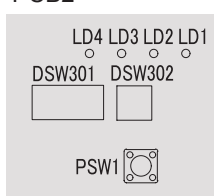

◆ DSW1: No setting is required

When set pin number 1 to ON, the electric current detection is cancelled. Pin number 1 should be set back to OFF after electrical work



◆ DSW301: Test run mode

Factory setting




◆ DSW2: Optional Function setting

Factory setting




◆ DSW3: Capacity

Factory setting

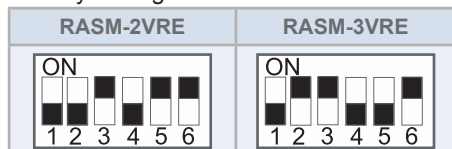

◆ DSW4 / RSW1: No setting is required

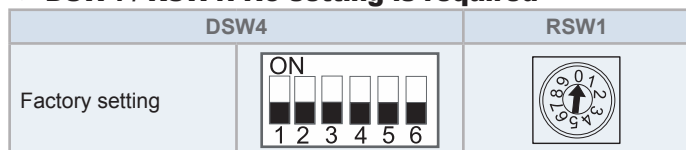

◆ DSW5: End terminal resistance (No setting is required)

Factory setting



◆ DSW6: No setting is required (Do not change)

Factory setting



◆ DSW7: No setting is required (Do not change)

Factory setting



◆ DSW302: Piping Length Setting (Setting is required)

Factory setting




◆ LED indication

Name	Colour	Indication
PCB1		
LED1	Red	Power
LED2	Green	Communication with inverter
LED3	Yellow	H-Link transmission
LED4	Yellow	Not used
LED351	Red	For inspection
LED353	Red	For inspection
PCB2		
LD1	Red	For inspection
LD2	Red	For inspection
LD3	Red	For inspection
LD4	Red	For inspection

10.5.2 Location of DIP switches and rotary switches

PCB3

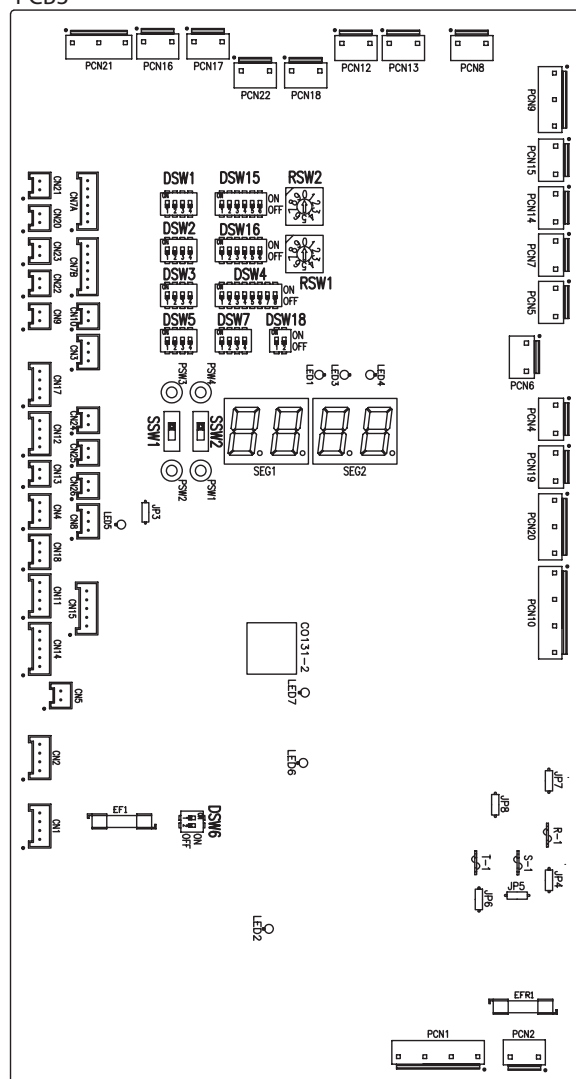

◆ Function of DIP switches and rotary switches

NOTE

- The mark “■” indicates the DIP switches positions.
- No mark “■” indicates pin position is not affected.
- The figures show the settings before shipment or after selection.
- “Not used” means that the pin must not be changed. A malfunction might occur if changed.

CAUTION

Before setting DIP switches, first turn the power supply OFF and then set the position of DIP switches. If the switches are set without turning the power supply OFF, the contents of the setting are invalid.

◆ DSW1: Additional setting 0

Factory setting. No setting is required.



Factory setting	
-----------------	---

NOTE


In case of installing the “Cooling kit” accessory, set the pin 4 of DSW1 to ON in order to enable the cooling operation.

◆ DSW2: Unit capacity setting





No setting is required.




2.0 HP	3.0 HP
	

◆ DSW3: Additional setting 1

Factory setting	
-----------------	---

◆ DSW4: Additional setting 2

Factory setting	
DHW defrost	
Heater forced OFF	
Unit and installation pipes antifreeze protection	
Standard / ECO water pump operation	







Electric heater or boiler emergency mode	
DHW tank's heater operation	
DHW 3-way valve forced ON	
YUTAKI M - Remote Control Box	

CAUTION

- Never turn all DSW4 DIP switch pins ON. If this happens, the software of the unit will be removed.
- Never activate “Heater Forced OFF” and “Electric heater or boiler emergency mode” at the same time.

◆ DSW5: Additional setting 3


In the cases where the outdoor unit is installed into a location where its own outdoor ambient temperature sensor can not give a suitable temperature measurement to the system, it is available the 2nd outdoor ambient temperature sensor as accessory. By means of DSW1 and 2 setting, the preferable sensor for each circuit can be selected.

Factory setting	
Outdoor unit sensor for circuits 1 and 2	
Outdoor unit sensor for circuit 1; Auxiliary sensor for circuit 2	
Auxiliary sensor for circuit 1; Outdoor unit sensor for circuit 2	
Auxiliary sensor instead of outdoor unit sensor for both circuits	
Use the maximum temperature value between Two3 (boiler / heater thermistor) and Two (water outlet thermistor) for water control	


◆ DSW6: Not used

Factory setting (Do not change)	
------------------------------------	---

◆ **DSW7: Additional setting 4**

Factory setting	
Compatibility with ATW-RTU-04 (When cooling mode operation is needed)	

◆ **DSW15 & RSW2/ DSW16 & RSW1: Not used**

Factory setting (Do not change)	 
------------------------------------	---

◆ **DSW18: Not used**

Factory setting (Do not change)	
------------------------------------	---

◆ **SSW1: Remote/Local**

Factory setting (Remote operation)	Remote 
Local operation	Remote 

◆ **SSW2: Heat/Cool**

Factory setting (Heat operation)	Heat 
Cool and Heat operation in case of Local	Heat 

10.5.3 LED indication

Name	Colour	Indication
LED1	Green	Power indication
LED2	Red	Power indication
LED3	Red	Heat pump operation (Thermo ON/OFF)
LED4	Yellow	Alarm (flickering with 1 sec interval)
LED5	Green	Not used
LED6	Yellow	H-LINK transmission
LED7	Yellow	H-LINK RCS transmission

11 COMMISSIONING**11.1 BEFORE OPERATION****⚠ CAUTION**

- Supply electrical power to the system for approximately 12 hours before start-up after a long shut-off. Do not start the system immediately after power supply, it may cause compressor failure because the compressor is not well-heated.
- When the system is started after a shut-off longer than approximately 3 months, it is recommended that the system be checked by your service contractor.
- Turn OFF the main switch when the system is to be stopped for a long period of time: as the oil heater is always energized even when the compressor is not working, there will be electricity consumption unless the main switch is turned OFF.

11.2 PRELIMINARY CHECK

When installation is complete, perform commissioning according to the following procedure, and hand over the system to the customer. Perform the commissioning of the units methodically, and check that the electrical wiring and the piping are correctly connected.

YUTAKI M units must be configured by the installer to get the perfect setting and the unit working.

11.2.1 Checking the unit

- Check external appearance of the unit to look for any damage due to transportation or installation.
- Check that all the covers are totally closed.
- Check that the recommended service space is respected (see "6.1 Service space").
- Check that the unit has been correctly installed.

11.2.2 Electrical checking**⚠ CAUTION**

Do not operate the system until all the check points have been cleared:

- Check to ensure that the electrical resistance is more than 1 MΩ, by measuring the resistance between ground and electrical parts terminal. If not, do not operate the system until the electrical leakage is found and repaired. Do not impress the voltage on the terminals for transmission and sensors.
- Check to ensure that the switch on the main power source has been ON for more than 12 hours, in order to give the oil heater time to warm the compressor.
- In three-phase unit check phase sequence connection on terminal board.
- Check the power supply voltage (±10% of the rated voltage).
- Check that field-supplied electrical components (main switches, breakers, wires, conduit connectors and wire terminals) have been properly selected according to the electrical specifications given in this document, and check that the components comply with national and local standards.
- Do not touch any electrical components for more than three minutes after turning OFF the main switch
- Check the DIP switch settings of the unit are connected as shown in the corresponding chapter.
- Check to ensure the electrical wiring of the unit is connected as shown in the chapter.

- Check to ensure the external wiring is correctly fixed. To avoid problems with vibrations, noises and cut out wires with the plates.

11.2.3 Hydraulic circuit checking (space heating and DHW)

- Check that the circuit has been properly flushed and filled with water and that the installation has been drained: the pressure of the heating circuit must be 1.8 bar
- Check for any leakage in water cycle. Pay special attention to the water piping connections.
- Make sure the system's internal water volume is correct.
- Check that the hydraulic circuit's valves are fully open.
- Check to see that additional water pumps (WP2 or/and WP3) are correctly connected to terminal board.

⚠ CAUTION

- Operating the system with closed valves will damage the unit.
- Check to see that air purge valve is open and that the hydraulic circuit is air purged. The installer is responsible of completely air purging the installation.
- Check that the water pump of the space heating circuit works within the pump operating range and that the water flow is over the pump's minimum. If the water flow is under 12 litres/minute (6 litres/minute for 3.0HP unit) (with flow switch tolerance), alarm will be displayed on the unit.
- Remember that water connection must be accordance with local regulations.
- Water quality must comply with EU directive 98/83 EC.
- Electrical heater operation when not completely filled with water will damage the heater.

11.2.4 Checking the refrigerant circuit

- Check to ensure that the stop valves on the gas and liquid lines are fully open.
- Check the inside of the unit for refrigerant leakage. If there is a refrigerant leak, call your dealer.
- Do not touch any of the parts by hand at the discharge gas side, since the compressor chamber and the pipes at the discharge side are heated higher than 90°C.
- DO NOT PUSH THE BUTTON OF THE MAGNETIC SWITCH(ES), it will cause a serious accident.
- Confirm that the leakage of the refrigerant does not exist. The flare nuts are sometimes loosened by vibration during transportation

11.2.5 Test and check

Finally, test and check the following items:

- Water leakage
- Refrigerant leakage
- Electrical connection

11.3 COMMISSIONING PROCEDURE

This procedure is valid regardless of what options are on the module.

- When installation is complete and all necessary settings (DIP-switches in PCBs and user controller configuration) have been carried out, close the electrical box and place the cabinet as shown in the manual.

- Make the start-up wizard configuration in the user controller.
- Make a test run as shown in item [“11.4 Test run / air purge”](#).
- After test run is completed, start the entire unit or the selected circuit by pressing the OK button.

◆ Initial start-up at low outdoor ambient temperatures

During commissioning and when water temperature is very low, it is important for the water to be heated gradually. Additional optional function can be used for starting at low water temperature conditions: Screed drying function:

- The screed function is used exclusively for the process of drying a newly applied screed to the floor heating system. The process is based on EN-1264 par 4.
- When user activates screed function, the water set point follows a predetermined schedule:

- 1 Water set point is kept constant at 25°C for 3 days
- 2 Water set-point is set to the maximum Heating supply temperature (but always limited to ≤ 55°C) for 4 days.

⚠ CAUTION

- Heating at lower water temperatures (approximately 10°C to 15°C) and lower outdoor ambient temperatures (<10°C) can be damaging to the heat pump when defrosting.
- As a result, Heating up to 15°C when outdoor temperature is lower than 10°C is performed by the electrical heater.

i NOTE

In case of Heater Forced OFF (by optional DIP switch setting) these condition is not performed and heating is performed by Heat Pump. HITACHI is not responsible for its operation.


⚠ CAUTION

It is recommended start the unit (first power ON) with heater forced OFF and compressor forced OFF (See [“10.5 Setting of DIP switches and RSW switches”](#)). In order to circulate water by water pump and remove possible air into the heater (Check heater completely filled).

11.4 TEST RUN / AIR PURGE


Test run is a working mode used when commissioning the installation. Some settings are made to let the installer an easy job. Air purge function drives the pump in a way for evacuating air bubbles in the installation.

A menu with specific function for commissioning appears by pressing the menu+back buttons for 3 seconds at the installer menu (OK+back buttons).

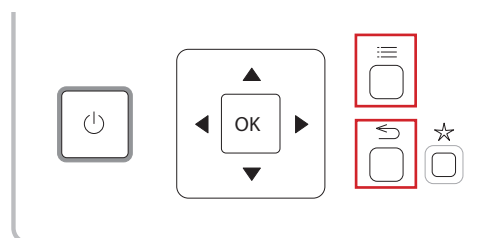

This menu shows the following test to be launched:

- Unit Test Run
- Air Purge
- Screed Drying

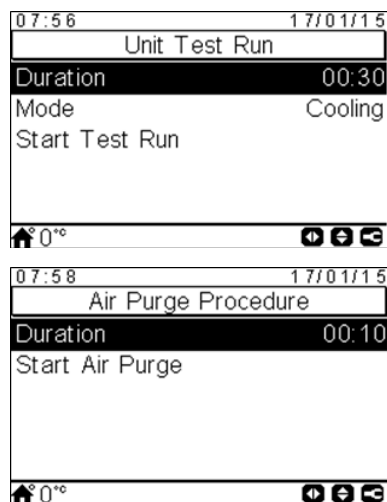


After “Test Run” or “Air Purge” option is selected, the YUTAKI user controller asks for the duration of the test.

In case of test run, user can also select the mode of the test (cooling or heating).

When user confirms the test run or the air purge, the YUTAKI user controller sends the order to the unit.

During the execution of this test, the following screen is shown:

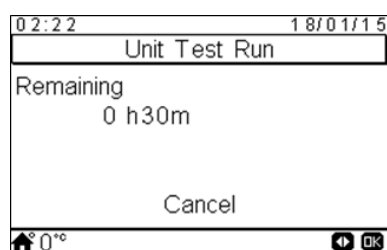

- When the test starts, the user controller will exit from the installer mode.
- If “favourite action button” is pressed during test run, this function will be executed until the user presses the cancel option (this is not-limited by time).
- User can cancel the test run regardless of the time left for test finishing.
- The Test Run icon is shown in the notifications zone, but the notification of this test run is taken from H-LINK.


When test run has finished, an information message is displayed in the screen, and pressing accept, the user returns to the global view.

NOTE

- When commissioning and installing the unit, it is very important to use the “Air purge” function to remove all the air in the water circuit. When the air purge function is running, the water pump starts the automatic air venting routine which consists of regulating the speed and open/close configured 3-way valve to help to evacuate air from the system.
- If there is a Heater or a Boiler installed, disable the operation before running the test run.

12 UNIT CONTROLLER

12.1 DEFINITION OF THE SWITCHES

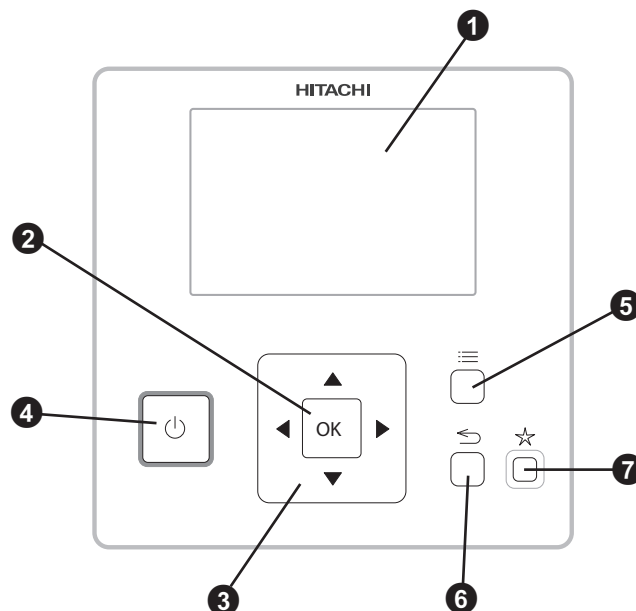

1 Liquid Crystal Display

Screen where controller software is displayed.

2 OK button

To select the variables to be edited and to confirm the selected values.

3 Arrows key

It helps the user to move through the menus and views.

4 Run/Stop button

It works for all zones if none of the zones is selected or only for one zone when that zone is selected.

5 Menu button

It shows the different configuration options of the user controller.

6 Return button

To return to the previous screen.


7 Favourite button

When this button is pressed, the selected favourite action (ECO/Comfort, Holiday, Simple timer or DHW boost) is directly executed.

12.2 MAIN SCREEN

Depending on the working mode of the user controller, the main screen is shown in a different way. When the user controller is working as a master unit controller, a comprehensive view with all the elements is shown, whereas when the user controller is working as a room thermostat (located in one of the controlled zones), the main screen appears with simplified information.

12.2.1 Comprehensive view

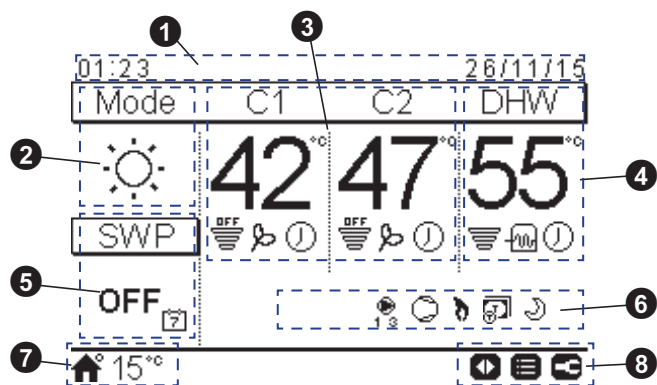

1 Time and date

The current time/date information is displayed. This information can be changed on the configuration menu.

2 Operation mode (Heating / Cooling / Auto)

This icon shows the unit's mode of operation status. It has to be edited by pressing the OK button, and it can be switched between Heating, Cooling and Auto mode (If enabled option).

3 Control of circuits 1 and 2

It displays the setting temperature calculated for each circuit and a throughput icon indicating the percentage of the actual temperature with respect to the setting temperature. It can also show the ECO mode and timer activation if they are enabled.

The setting temperature can be modified using the arrows keys over this view (if Water calculation mode is set as "Fix").

Pressing the OK button, the following options are shown:

- Timer: In this menu, simple timer or schedule timer can be selected and configured.
- OTC: OTC Setting temperature (User can only refer to the OTC mode and its setting temperature value)
- Comfort/ECO: Selection between Comfort and ECO mode.
- Status: Some working conditions can be consulted.

4 DHW control

It displays the setting temperature calculated for DHW and a throughput icon indicating the percentage of the actual temperature with respect to the setting temperature. It can also show the operation of the electrical heater of the DHW, the timer activation and the DHW boost if they are enabled.

The setting temperature can be modified using the arrows keys over this view.

Pressing the OK button, the following options are shown:

- Timer: In this menu, simple timer or schedule timer can be selected and configured.
- DHW boost: It activates the DHW heater for an immediate DHW operation
- Status: Some working conditions can be consulted.

If anti-legionella operation is working, its icon appears below the setting temperature.

5 Swimming pool control

It gives information about the swimming pool setting temperature and displays a throughput icon indicating the percentage of the actual temperature with respect to the setting temperature.

The setting temperature can be modified using the arrows keys over this view.

Pressing the OK button, the following options are shown:

- Timer: In this menu, simple timer or schedule timer can be selected and configured.
- Status: Some working conditions can be consulted.

6 Unit status signals

This part of the screen displays all the notification icons that offer general knowledge on the unit's situation

Some of these icons can be: Defrost operation, Water pumps, Compressor/s, Boiler working, Tariff input, Test run, Night Shift...

7 Outdoor temperature / Alarm indication

In normal operation, the outdoor temperature is displayed besides the home icon signal.


In abnormal operation, the alarm icon is indicated with its corresponding alarm code.

8 Available buttons / Installer mode

It indicates the buttons of the user controller which can be used in that moment.

When Installer mode is enabled, its icon appears on the right side of this view.

12.2.2 Room thermostat view

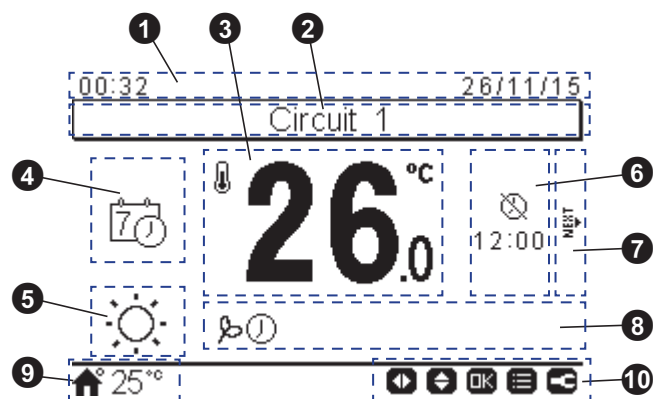

1 Time and date

The current time/date information is displayed. This information can be changed on the configuration menu.

2 Definition of the circuit

It informs about which circuit is being indicated (1 or 2).

3 Actual/Setting room temperature

It displays the actual room temperature. The setting temperature can be adjusted using the up/down arrows keys. In this case, while the setting temperature is being modified, the icon of the actual room temperature is indicated below the setting temperature (house icon).

4 Room thermostat mode

In this part of the screen, the room thermostat mode can be selected between Manual and Auto. If Auto is selected, two possible icons can be displayed: one if a timer period has been selected and the other one if not.

5 Operation mode (Heating / Cooling / Auto)

The current operation mode is displayed. To configure it, press OK to enter in the quick actions (Auto if enabled option).

6 End of timer/holiday operation

In this area, the end hour of the simple timer, holiday period or schedule action is indicated below its respective icon.

7 Next circuit

It informs that there is a room thermostat view for a second circuit and it is possible to access by pressing the right key.

8 Icons notification

This part of the screen displays all the notification icons that offer general knowledge on the unit's situation

Some of these icons can be: ECO mode, Timer operation...

9 Outdoor temperature / Alarm indication

In normal operation, the outdoor temperature is displayed besides the home icon signal.

In abnormal operation, the alarm icon is indicated with its corresponding alarm code.

10 Available buttons / Installer mode

It indicates the buttons of the user controller which can be used in that moment.

When Installer mode is enabled, its icon appears on the right side of this view.

◆ OK button

Pressing the OK button, the quick actions are shown:

- **Timer:** In this menu, simple timer or schedule timer can be selected and configured.
- **Operation mode:** It allows to select the unit operation between Heating, Cooling and Auto mode (if enabled option).
- **ECO/Comfort:** Selection between ECO and Comfort mode.
- **Holiday:** It allows to start a holiday period until the configured returning date and time.
- **Status:** Some working conditions can be consulted.

12.3 DESCRIPTION OF THE ICONS

12.3.1 Common icons

Icon	Name	Values	Explanation
OFF	Status for circuit 1, 2, DHW and swimming pool.		Circuit I or II is in Demand-OFF
			Circuit I or II is on Thermo-OFF
			Circuit I or II is working between $0 < X \leq 33\%$ of the desired water outlet temperature
			Circuit I or II is working between $33 < X \leq 66\%$ of the desired water outlet temperature
			Circuit I or II is working between $66 < X \leq 100\%$ of the desired water outlet temperature
	Mode		Heating
			Cooling
			Auto
	Setting temperatures	Value	Displays the setting temperature of the circuit 1, circuit 2, DHW and swimming pool
		OFF	Circuit 1, Circuit 2, DHW or Swimming Pool are stopped by button or timer
	Alarm		Existing alarm. This icon appears with the alarm code
	Timer		Simple timer
			Weekly timer
	Derogation		When there is a derogation from the configured timer
	Installer mode		Informs that user controller is logged on the installer mode which has special privileges
	Menu lock		It appears when menu is blocked from a central control. When communication is lost, this icon disappears
	Outdoor temperature		The ambient temperature is indicated at the right side of this button

12.3.2 Icons for the comprehensive view

Icon	Name	Values	Explanation
	Pump		This icon informs about pump operation. There are three available pumps on the system. Each one is numbered, and its corresponding number is displayed below to the pump icon when it is operating
	Heater step		Indicates which of the 3 possible heater steps is applied on space heating
	DHW Heater		Informs about DHW Heater operation. (If it is enabled)
	Solar		Combination with solar energy
	Compressor		Compressor enabled
	Boiler		Auxiliary boiler is working
	Tariff		Tariff signal informs about some cost conditions of the consumption of the system
	Defrost		Defrost function is active
	Central/Local	-	No icon means local mode
	Central/Local		Central mode (Three types of control: Water, Air or Full)
	Forced OFF		When forced off Input is configured and its signal is received, all the configured items on the comprehensive view (C1, C2, DHW, and/or SWP) are shown in OFF, with this small icon below
	Auto ON/OFF		When daily average is over auto summer switch-off temperature, circuits 1 and 2 are forced to OFF (Only if Auto ON/OFF enabled)
	Test Run		Informs about the activation of the "Test Run" function
	Anti-Legionella		Activation of the Anti-Legionella operation
	DHW boost		It activates the DHW heater for an immediate DHW operation
	ECO/Comfort mode for circuits 1 and 2	-	No icon means Comfort mode
			ECO mode
	Night Shift		Informs about night shift operation

12.3.3 Icons for the room thermostat view

Icon	Name	Values	Explanation
	Manual/Auto mode		Manual mode
			Auto mode with timer setting
			Auto mode without timer setting
	Setting/Room temperature		Setting temperature
			Room temperature
	End of timer period		The end hour of the timer period is indicated below this icon
	End of holiday period		The end hour of the holiday period is indicated below this icon
	Setting temperature		This icon appears while the setting temperature is being changed, and indicates the actual temperature
	Next screen		When room thermostat has been configured for both circuit 1 and 2, this icon appears at the right side of the screen to indicated that there is a 2nd room thermostat view

13 MAIN SAFETY DEVICES

◆ Compressor protection

High pressure switch:

This switch cuts out the operation of the compressor when the discharge pressure exceeds the setting.

◆ Fan motor protection

When the thermistor temperature is reached to the setting, motor output is decreased.

The other way, when the temperature becomes lower, limitation is cancelled.

Model				RASM-2VRE	RASM-3VRE
For compressor					
Pressure switches			-	Automatic Reset, Non-Adjustable (each one for each compressor)	
High	Cut Out	MPa		4.15	
	Cut-In	MPa		3.20	
Low	Cut-Out	MPa		0.30	
	Cut-In	MPa		0.20	
Fuse on PCB			-		
1~ 230V 50Hz			A	25	25
CCP Timer			-	Non-Adjustable	
Setting Time			min.	3	
For condenser fan motor					
Internal Thermostat			-	Automatic Reset, Non-Adjustable (each one for each motor)	
For Control Circuit					
Fuse on PCB			A	5	
For Electrical Heater (Accessory)					
Fuse			A	20	

1 INFORMACIÓN GENERAL

Ningún fragmento de esta publicación puede ser reproducido, copiado, archivado o transmitido en ninguna forma o medio sin permiso de Johnson Controls-Hitachi Air Conditioning Spain, S.A.U.

En el marco de una política de mejora continua de la calidad de sus productos, Johnson Controls-Hitachi Air Conditioning Spain, S.A.U. se reserva el derecho de realizar cambios en cualquier momento, sin comunicación previa y sin incurrir en la obligación de introducirlos en los productos vendidos con anterioridad. Por lo tanto, este documento puede haber sufrido modificaciones durante la vida del producto.

HITACHI realiza todos los esfuerzos posibles para ofrecer documentación correcta y actualizada. Pese a ello, los errores de impresión están fuera del control de HITACHI, que no se hace responsable de ellos.

En consecuencia, algunas de las imágenes o algunos de los datos empleados para ilustrar este documento pueden no corresponder a modelos concretos. No se admitirán reclamaciones basadas en los datos, ilustraciones y descripciones de este manual.

2 SEGURIDAD

2.1 SÍMBOLOS EMPLEADOS

Durante el diseño del sistema de bomba de calor y la instalación de la unidad, es necesario prestar mayor atención en algunas situaciones que requieren especial cuidado, para evitar daños en el equipo, en la instalación o en el edificio o inmueble.

En este manual se indicarán claramente las situaciones que puedan comprometer la integridad de las personas o que pongan en peligro el equipo.

Para identificar estas situaciones se emplean una serie de símbolos especiales.

Preste mucha atención a estos símbolos y a los mensajes que les siguen, pues de ello depende su propia seguridad y la de los demás.



Este dispositivo contiene R32, un refrigerante inodoro con una velocidad de combustión lenta. Una fuga de refrigerante puede provocar un incendio si entra en contacto con una fuente de combustión externa.

! PELIGRO

- Los textos precedidos de este símbolo contienen información e indicaciones relacionadas directamente con su seguridad.
- Si no se tienen en cuenta dichas indicaciones tanto usted como otras personas pueden sufrir lesiones graves, muy graves o incluso mortales.

En los textos precedidos del símbolo de peligro, también puede encontrar información sobre formas seguras de proceder durante la instalación de la unidad.

! PELIGRO



Esta señal indica que el equipo utiliza un refrigerante con una velocidad de combustión lenta. Una fuga de refrigerante puede provocar un incendio si entra en contacto con una fuente de combustión externa.

RIESGO DE EXPLOSIÓN

Antes de retirar las tuberías de refrigerante debe detener el compresor. Tras recuperar el refrigerante todas las válvulas de servicio deben estar completamente cerradas.

! PRECAUCIÓN

- Los textos precedidos de este símbolo contienen información e indicaciones relacionadas directamente con su seguridad.
- Si no se tienen en cuenta dichas indicaciones tanto usted como otras personas pueden sufrir lesiones leves.
- No tener en cuenta estas instrucciones puede provocar daños en el equipo.

En los textos precedidos del símbolo de precaución, también puede encontrar información sobre formas seguras de proceder durante la instalación de la unidad.

i NOTA

- Los textos precedidos de este símbolo contienen informaciones o indicaciones que pueden resultar útiles, o que merecen una explicación más extensa.
- También puede incluir indicaciones acerca de comprobaciones que deben efectuarse sobre elementos o sistemas del equipo.

Símbolo	Explicación
	Lea el manual de instalación y funcionamiento y la hoja de instrucciones del cableado antes de comenzar la instalación.
	Antes de realizar tareas de mantenimiento y servicio, lea el manual de servicio.
	Para más información, consulte la guía de referencia del instalador y el usuario.

2.2 INFORMACIÓN ADICIONAL SOBRE SEGURIDAD

PELIGRO

- **No vierta agua en la unidad interior ni en la exterior. Estos productos están equipados con piezas eléctricas. Si el agua entra en contacto con los componentes eléctricos, se producirá una descarga eléctrica grave.**
- **No toque ni ajuste dispositivos de seguridad dentro de las unidades interior y exterior. En caso contrario, puede provocar un accidente grave.**
- **No abra la tapa de servicio ni el panel de acceso de las unidades interior y exterior sin desconectar la alimentación principal.**
- **En caso de incendio, apague el interruptor principal, extinga el fuego de inmediato y póngase en contacto con su proveedor de servicios.**

PRECAUCIÓN

- No emplee ningún aerosol, como insecticidas, barnices o lacas, ni ningún otro gas inflamable a menos de aproximadamente un (1) metro del sistema.
- Si el disyuntor o el fusible se activan con frecuencia, detenga el sistema y póngase en contacto con su proveedor de servicios.
- No realice ninguna tarea de mantenimiento ni inspección. Este trabajo debe llevarlo a cabo personal de servicio cualificado.
- No coloque ningún material extraño (palos, etc.) en la entrada ni en la salida de aire. Estas unidades disponen de ventiladores con una rotación de alta velocidad y el contacto de éstos con cualquier objeto es peligroso.
- Las fugas de refrigerante pueden dificultar la respiración por insuficiencia de aire.
- Este dispositivo debe ser utilizado únicamente por un adulto o por una persona responsable que haya recibido formación o instrucciones técnicas de cómo manipularlo de forma adecuada y segura.
- Vigile que los niños no jueguen con el dispositivo.

NOTA

Se recomienda ventilar la habitación cada 3 o 4 horas.

3 AVISO IMPORTANTE

- En el CD-ROM que se incluye con la unidad interior encontrará información adicional acerca del producto adquirido. Si no tiene el CD-ROM o si es ilegible contacte con su proveedor o distribuidor HITACHI.
- **LEA EL MANUAL Y EL CONTENIDO DEL CD-ROM CON ATENCIÓN ANTES DE INICIAR LAS TAREAS DE INSTALACIÓN DEL SISTEMA.** El incumplimiento de las instrucciones de instalación, uso y funcionamiento descritas en esta documentación, puede provocar fallos de funcionamiento potencialmente graves, o incluso la destrucción del sistema.
- Compruebe, en los manuales de las unidades interior y exterior, que dispone de toda la información necesaria para la correcta instalación del sistema. Si no es así, póngase en contacto con su distribuidor.
- HITACHI sigue una política de continua mejora del diseño y rendimiento de los productos. Se reserva, por lo tanto, el derecho a modificar las especificaciones sin previo aviso.
- HITACHI no puede prever todas las circunstancias que pudieran conllevar un peligro potencial.

- Esta unidad exterior no ha sido diseñada para procesos industriales y su uso como bomba de calor se limita al ámbito de aplicación de la serie YUTAKI. Para otros usos póngase en contacto con su proveedor o distribuidor de HITACHI.
- No se permite la reproducción de ningún fragmento de este manual sin permiso por escrito.
- Si tiene cualquier tipo de duda, póngase en contacto con su proveedor de servicios de HITACHI.
- Este manual debe considerarse como un elemento fijo del sistema de la bomba de calor. Este manual proporciona una descripción e información comunes para esta bomba de calor, así como para otros modelos.
- Compruebe y asegúrese de que las explicaciones de los apartados de este manual se corresponden con su modelo de bomba de calor.
- Consulte la codificación de los modelos para confirmar las principales características de su sistema.
- Para identificar los niveles de gravedad de los riesgos se utilizan palabras precedidas de señales (NOTA, PELIGRO y PRECAUCIÓN). Las definiciones empleadas para identificar estos niveles se indican a continuación junto a las respectivas palabras que las señalan.
- Esta unidad exterior es para utilizar exclusivamente para sistemas de agua por aire. No se puede utilizar con unidades interiores en sistemas de aire por aire.

PELIGRO

Recipiente de presión y dispositivo de seguridad: Esta bomba de calor está equipada con un recipiente de alta presión que cumple la directiva de equipos de presión. El recipiente ha sido diseñado y comprobado en antes del envío de acuerdo con dicha directiva. Así mismo, con el fin de evitar una presión anormal, se utiliza un presostato de alta presión en el sistema de refrigeración, que no precisa ningún tipo de ajuste en la instalación. Por lo tanto, esta bomba de calor está protegida de presiones anómalas. No obstante, si se aplica presión anormalmente alta al ciclo de refrigerante, incluidos el/los recipiente(s) de alta presión, éstos pueden explotar y provocar lesiones graves o la muerte. No aplique al sistema una presión superior a la indicada mediante la modificación o cambio del presostato de alta presión.

PRECAUCIÓN

Esta unidad está diseñada para uso comercial y en industria ligera. Si se instala en una vivienda, podría causar interferencias electromagnéticas.

PELIGRO



Salvo los métodos recomendados por el fabricante, no utilice ningún otro medio para acelerar el proceso de descarche o para limpiar la unidad.

- Se debe almacenar el dispositivo en una habitación sin fuentes de ignición en continuo funcionamiento (por ejemplo, llamas abiertas, dispositivos que funcionen con gas o calentadores eléctricos).
- No lo perfore ni queme.
- Puede que los refrigerantes sean inodoros.

Puesta en marcha y funcionamiento: Asegúrese de que todas las válvulas de cierre están totalmente abiertas y de que no existen obstáculos en los laterales de entrada/salida antes de la puesta en marcha y durante el funcionamiento.

Mantenimiento: Compruebe periódicamente el lado de alta presión. Si la presión es superior al máximo permitido, detenga el sistema y limpie el intercambiador de calor o elimine la causa del exceso.